



KMS-20
denver.eu

2026



 
Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. Do not put objects into any of the openings. Keep the unit free from dust, lint etc.
2. Never open the product. Touching the inside electric parts can cause electric shock. Repairs or service should only be performed by qualified personnel.
3. Do not expose to heat, water, moisture, direct sunlight!
4. This product is not a toy.
5. Children should be supervised while operating the item.
6. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
7. Warning: Lithium battery inside
8. This product does not support harmonized charging

Denver A/S reserve the rights for print errors

Denver A/S cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. If you detect any inaccuracies or omissions, please inform us at the address on the back cover.

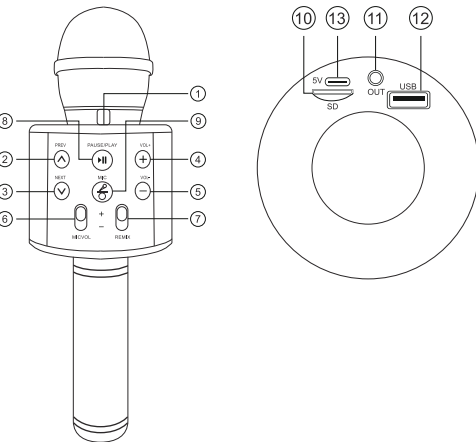

1. Power ON/OFF
2. Previous track
3. Next track
4. VOL+ button
5. VOL- button
6. Mic volume adjustment (HIGH/LOW)
7. Echo +high/-low
8. Play/Pause button
9. Accompaniment mode / Magic voice mode
10. Micro SD
11. Aux out & Headphone connection
12. USB port for audio playback
13. USB-C charging port

ENG 2

POWER SUPPLY

1. Check that the unit is switched off.
 2. Insert the small end of the USB C cable (included) into the USB C charging port (13).
 3. Connect the other end of the USB cable into the USB port of your powered computer or USB type power adapter and connect it to a wall socket. The LED near the USB C charging port lights up in red when the device is charging.
 4. Once charging is completed, the LED light will turn off.
- Note: Please note that the USB cable can only be used for battery charging and not for data transfer.

POWER ON AND POWER OFF

Press the power button for 3 seconds to turn the microphone ON /OFF.

PAIRING MICROPHONE WITH SMARTPHONE

Power ON the microphone and enable Bluetooth mode on your smartphone, search for the pairing name "KMS-20" and select it on your smartphone. Once the microphone is successfully paired with your smartphone, a notification sound will be heard.

ACCOMPANIMENT MODE

When you use the microphone to sing a song, short press the MIC button to enter the accompaniment mode, then the original voice will be partly removed / hidden. Short press the MIC button again to turn this function off.

CHANGE YOUR VOICE

Long press the MIC button to change the sound of your voice through the microphone. You will hear a notification sound and your voice will be changed. You can change between 4 different styles.

ENG 3

Each time you long press the MIC button, the sound of your voice will change. The fifth time you long press the MIC button, the microphone will change back to normal mode / your own voice.

REMIX FUNCTION

Push this button to Adjust Echo high/low on the microphone.

AUDIO OUTPUT (HEADPHONE CONNECTION)

The 3.5mm audio output is for connecting a wired headphone / earphone. Then you can hear the song you sing via headphone / earphone.

MODES

The speaker offers various modes: Bluetooth / USB and Micro SD / card (up to 32GB).

SPECS

Bluetooth Karaoke Mic
5W RMS output
Bluetooth 5.4
USB / Micro SD card / AUX output
Operating range up to 10 meters
Built-in battery with 5-6 hours playtime (1200mAh)

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.



ENG 4

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED. COPYRIGHT DENVER A/S



  denver.eu

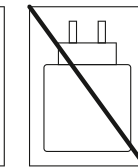

Electric and electronic equipment and included batteries contain materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries are marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user, it is important that you submit your used batteries to the appropriate and designated facility. In this manner, you make sure that the batteries are recycled in accordance with legislation and will not harm the environment.

ENG 5

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type KMS-20 is in compliance with Directive 2014/53/EU. The full text of the RED declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on the top line of the website. Write model number: KMS-20. Now enter product page, and RED directive is found under downloads/other downloads.

Information on standby/off mode power consumption and power management for products compliant with Commission Regulation (EU) 2023/826 can be found at the following internet address: denver.eu and then click the search ICON on the top line of the website. Write model number: KMS-20 and enter the page.

Max audio output power: 1x50W/1x5W RMS

Bluetooth operating frequency range: 2402MHz-2480MHz

Operating frequency range: 100Hz-20KHz

Max RF output power: 0.79 dBm

DENVER A/S
Omega 5A, Soeflen
DK-8382 Hinnerup
Denmark
www.denver.eu
www.facebook.com/denver.eu

ENG 6

Contact

Main contact point: contact.hq@denver.eu

Nordics
Headquarter
Denver A/S
Omega 5A, Soeflen
DK-8382 Hinnerup
Denmark
Phone: +45 86 22 61 00
(Push "1" for support)
E-Mail: support.hq@denver.eu
For technical questions, please write to: support.hq@denver.eu
For all other questions please write to: contact.hq@denver.eu

Germany
Denver Germany GmbH Service Center
Max-Emanuel-Str. 4
94036 Passau
Phone: +49 851 379 369 40
E-Mail: support.de@denver.eu
Monday - Thursday 09:00 - 16:30
Friday 09:00 - 14:00

Austria
Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien
Phone: +43 1 904 3085
E-Mail: denver@lurfservice.at

Benelux
DENVER BENELUX B.V.
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands
Phone: 0900-3437623
E-Mail: support.nl@denver.eu

Poland
LetMeRepair Poland sp. z o.o.
ul. Częstochowska 140
62-800 Kalisz
Phone: 62 75 38 092
E-Mail: denver-service@letmerepair.pl
Godziny pracy: 8 - 18 (poniedziałek - piątek)

Spain
Phone: +34 960 046 883
Mail: support.es@denver.eu

Portugal
Phone: +35 1255 240 294
E-Mail: denver.service@satfiel.com

denver
Denver A/S
Omega 5A, Soeflen
DK-8382 Hinnerup
Denmark
denver.eu
facebook.com/denver.eu

