



DMC-1203
denver.eu

09/2026



Safety page

- 1.Warning: This product includes lithium polymer batteries.
- 2.Keep the product out of the reach of children and pets to avoid chewing and swallowing.
- 3.Product operating and storage temperatures are from 0 degree Celsius to 40 degrees Celsius. Under and over this temperature might affect the function.
- 4.Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
- 5.Do not exposure to heat, water, moisture, direct sunlight!
- 6.The unit is not waterproof. If water or foreign objects enter the unit, it may resul in fire or electric shock. If water or a foreign object enters the unit, stop using immediately.
- 7.Only charge with supplied USB cable.

ENG 1

Product overview

- 1.Power/record/confirm button
- 2.Menu/Down button
- 3.Display
- 4.Up button
- 5.Charging Port
- 6.Camera
- 7.SD Card Slot

Denver A/S reserves the rights for print errors

Denver A/S cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. If you detect any inaccuracies or omissions, please inform us at the address on the back cover.

ENG 2

Button and Interface Functions

- Power Button:**
- Press and hold the power button to turn the device on/off.
 - Press the menu button to record a video, take a photo or record a memo.
 - Press power button to confirm an action.

- Up Button:** Press and hold to turn the flashlight on/off. In menu mode, press the Up button to navigate. In playback mode, press to switch to the previous file. In photo/video mode tap to switch filters.

- Down Button:** Press and hold to open/exit the menu. In menu mode, press the Down button to navigate. Press to switch between modes: video, photo, memo, or playback. In playback mode, press and hold to switch to the next file.

ENG 3

Operation Instructions

USB Mode

When the device is connected to a computer via USB, the screen will automatically display the following options: 'Storage/PCCamera/Video Mode':

Memory: In this mode, you can access and view videos, photos, and audio files.

PC Camera: In this mode, you can use your camera as a webcam.

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

ENG 4

Reset function:

If the machine has a distorted screen or abnormal freeze, press the power button and the down button at the same time to force it to shut down. Note: Do not remove or insert the card while in video/photo recording/playback mode.

TYPE-C Port: Use to connect an external power supply for battery charging or to connect to a PC for storage/PC camera/video mode.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

ENG 5

Operation Instructions

USB Mode

When the device is connected to a computer via USB, the screen will automatically display the following options: 'Storage/PCCamera/Video Mode':

Memory: In this mode, you can access and view videos, photos, and audio files.

PC Camera: In this mode, you can use your camera as a webcam.

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

ENG 6

Operation Instructions

USB Mode

When the device is connected to a computer via USB, the screen will automatically display the following options: 'Storage/PCCamera/Video Mode':

Memory: In this mode, you can access and view videos, photos, and audio files.

PC Camera: In this mode, you can use your camera as a webcam.

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

ENG 7

Operation Instructions

USB Mode

When the device is connected to a computer via USB, the screen will automatically display the following options: 'Storage/PCCamera/Video Mode':

Memory: In this mode, you can access and view videos, photos, and audio files.

PC Camera: In this mode, you can use your camera as a webcam.

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

ENG 8

Operation Instructions

USB Mode

When the device is connected to a computer via USB, the screen will automatically display the following options: 'Storage/PCCamera/Video Mode':

Memory: In this mode, you can access and view videos, photos, and audio files.

PC Camera: In this mode, you can use your camera as a webcam.

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

ENG 9

Operation Instructions

USB Mode

When the device is connected to a computer via USB, the screen will automatically display the following options: 'Storage/PCCamera/Video Mode':

Memory: In this mode, you can access and view videos, photos, and audio files.

PC Camera: In this mode, you can use your camera as a webcam.

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

ENG 10

Operation Instructions

USB Mode

When the device is connected to a computer via USB, the screen will automatically display the following options: 'Storage/PCCamera/Video Mode':

Memory: In this mode, you can access and view videos, photos, and audio files.

PC Camera: In this mode, you can use your camera as a webcam.

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

ENG 11

Operation Instructions

USB Mode

When the device is connected to a computer via USB, the screen will automatically display the following options: 'Storage/PCCamera/Video Mode':

Memory: In this mode, you can access and view videos, photos, and audio files.

PC Camera: In this mode, you can use your camera as a webcam.

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

ENG 12

Operation Instructions

USB Mode

When the device is connected to a computer via USB, the screen will automatically display the following options: 'Storage/PCCamera/Video Mode':

Memory: In this mode, you can access and view videos, photos, and audio files.

PC Camera: In this mode, you can use your camera as a webcam.

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

ENG 13

Operation Instructions

USB Mode

When the device is connected to a computer via USB, the screen will automatically display the following options: 'Storage/PCCamera/Video Mode':

Memory: In this mode, you can access and view videos, photos, and audio files.

PC Camera: In this mode, you can use your camera as a webcam.

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

ENG 14

Operation Instructions

USB Mode

When the device is connected to a computer via USB, the screen will automatically display the following options: 'Storage/PCCamera/Video Mode':

Memory: In this mode, you can access and view videos, photos, and audio files.

PC Camera: In this mode, you can use your camera as a webcam.

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

ENG 15