



KCA-1340

04/2026



FR

Cet appareil et
ses accessoires
sont recyclables

À DÉPOSER
EN MAGASIN



ou

À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. Warning: This product includes lithium polymer batteries.
2. WARNING: CHOKING HAZARD – Children under 3 yrs. can choke or suffocate on camera because of its small size. Adult supervision required. Keep camera away from toddlers and pets to avoid chewing and swallowing. Discard broken buttons or parts at once.
3. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
4. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
5. Do not expose to heat, water, moisture, direct sunlight!
6. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
7. Only charge with supplied USB cable.
8. Do not use non original accessories together with the product as this can make the product functionality abnormal.

1. INTRODUCTION

1.1. PRODUCT OVERVIEW



1.2. POWERING THE DEVICE ON/OFF

- Power on: Press and hold the power button to turn on the camera.
- Power off: Press and hold the power button to turn off the camera.

1.3. SD CARD

- SD cards up to 64 GB are supported. To remove the card or insert a new card, proceed as follows:
 1. To remove the card, press it gently until it clicks audibly and then take it out.
 2. To replace the card or insert a new card, insert the card (such as a microSD card) into the dedicated SD card slot with the contacts facing the display, as illustrated below:



Note:

- Before inserting or replacing a microSD card, make sure the unit is powered off.
- When inserting the microSD card, make sure it is properly oriented.
- Never force a card in violently, as this may damage the card or the unit. If it does not fit easily, check to ensure it is oriented correctly.

1.4. HOME PAGE ICONS



1.5. BATTERY CHARGING

- Plug the included USB Type-C cable (small end) into the USB Type-C port of the camera, as illustrated below:



- Plug the USB type – A end (large end) into your computer or standard USB power adapter outlet.
- When the connection is successful, a battery charging symbol appears on the camera screen.
- When the battery is fully charged, the battery symbol on the screen looks full.

- When the battery is fully charged, disconnect the charger from the power outlet first, then disconnect the charging cable from the camera.

Note: Please charge your camera before you use it. It takes approximately 2 hours to fully charge the battery.

2. CAMERA

2.1. Photo

- Press the direction buttons to select the camera icon, then press the Camera/Video button to enter Camera mode.
- Press the Camera/Video button to take a photo.
- In Camera mode, press the right button to switch between front and rear lenses.

2.2. Photo frames

- Enter Camera mode and press the up and down buttons to select various photo frames and special effects.

3. ZOOM

- In camera mode, long press the up or down button to zoom the photo in or out.

4. VIDEO

- Press the direction buttons to select the video icon, then press the Camera/Video button to enter Video mode.
- Press the Camera/Video button to begin recording the video.
- When you are done, press the same button to stop recording the video.

5. PLAYBACK

- Press the direction buttons to select the playback icon, then press the Camera/Video button to enter Playback mode.
- Press the up or down button to select the video or photo.
- Press the Camera/Video button to playback the video.
- Press the left button to delete the video or photo.

6. GAMES

- Press the direction buttons to select the games icon, then press the Camera/Video button to enter Games mode.
- The camera has 5 pre-installed games.

7. MUSIC

- Press the direction buttons to select the music icon, then press the Camera/Video button to enter Music mode.
- Press the direction buttons to select the music you want to play, then press the Camera/Video button to play the music.

* **Note: You should copy a music file in the MP3 format to the camera first.**

8. SETTINGS

- Press the direction buttons to select the settings icon, then press the Camera/Video button to enter Settings mode.
- Press the direction buttons to select any menu options, then press the Camera/Video button to confirm the menu setting.

9. RESETTING THE DEVICE

- There is a small hole under the USB port. When the camera is halted, use something pointy to stick inside the small hole. The camera will then reset. See illustration below:



10. SPECIFICATIONS

Speaker	1W
Battery	600 mAh (full capacity with protective board)
Resolution	1080p/720p/VGA
Video Resolution	Real: 640*480(VGA) Interpolation: 1920*1080
Photo Resolution	Real: 640*480 Interpolation: 40 MP
Screen Size	2-inch IPS screen
Material	ABS with rubber coating
Storage Media	Max. 64 GB supported
Memory	Note: Built-in memory (can take and store 50 photos) but cannot record video. Pictures taken to the built-in memory can only be viewed on the camera itself. To be able to transfer photos and videos to a PC, please make sure to insert a MicroSD card before use. (even with MicroSD card inserted, photos taken before that, onto the built-in memory, cannot be taken out of the camera)"
System Requirements	Windows XP/Vista/7/8, Mac OS X 10.8

- Note: The product specifications are based on updated information when compiling this product manual. The specifications are subject to change without further notice. The product is the actual camera. When the camera crashes from a drop, please restart it.
- Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



Electric and electronic equipment and included batteries contains materials , components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Information on standby/off mode power consumption and power management for products compliant with Commission Regulation (EU) 2023/826 can be found at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: KCA-1340 and enter the page.

DENVER A/S
Omega 5A, Soefte
DK-8382 Hinnerup
Denmark
www.denver.eu
www.facebook.com/denver.eu

Warning: lithium battery inside

Contact

Main contact point: contact.hq@denver.eu

Nordics

Headquarter

Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**

(Push "1" for support)

E-Mail

For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.

Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**

E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A

Ronda Augustes y Louis Lumiere, n° 23 – nave
16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain

Phone: **+34 960 046 883**

Mail: **support.es@denver.eu**

Portugal:

Phone: **+35 1255 240 294**

E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service

Service Center
Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail

support.de@denver.eu

Monday - Thursday 09:00 - 16:30
Friday 09:00 - 14:00

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**

E-Mail: **denver@lurfservice.at**

Poland

LetMeRepair Poland sp. z o.o.

ul. Częstochowska 140
62-800 Kalisz

Phone: **62 75 38 092**

E-Mail: **denver-service@letmerepair.pl**

Godziny pracy: 8 – 18 (poniedziałek – piątek)

If your country is not listed above,
please write an email to
contact.hq@denver.eu



Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

