 


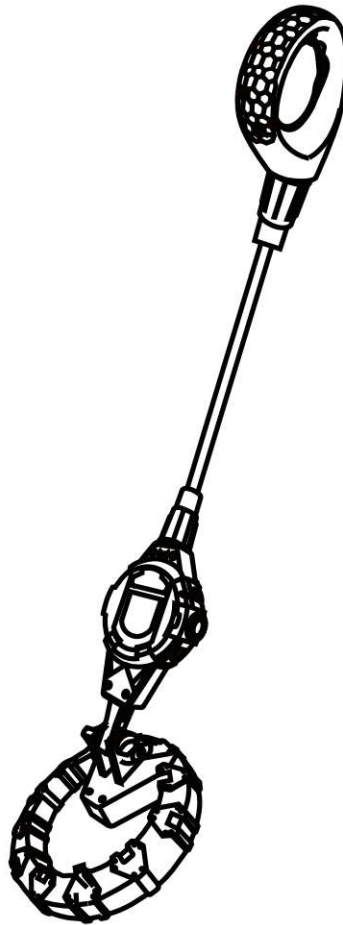

MTK-106

denver.eu

July 2026



FR

**Cet appareil
est recyclable**

**À DÉPOSER
EN MAGASIN**



**À DÉPOSER
EN DÉCHÈTERIE**

ou



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of the reach of children.
2. Keep product out of the reach of children and pets to avoid chewing and swallowing.
3. Never use old and new batteries or different types of batteries together. Remove the batteries when not using the system for long periods of time. Check the polarity (+/-) of the batteries when inserting them in the product. Incorrect positioning may cause the risk of an explosion. Batteries are not included.
4. Product operating and storage temperature is from 0 degrees Celsius to 40 degrees Celsius. Environments under and above this temperature might affect functionality.
5. Never open the product. Repair or service is only to be performed by qualified personnel.

Denver A/S reserves the rights for print errors

Denver A/S cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. if you detect any inaccuracies or omissions, please inform us at the address on the back cover.

Product overview



- | | |
|-------------------|--------------|
| 1. Search coil | 6. Lock nut |
| 2. Fixing knob | 7. LCD panel |
| 3. Knob connector | 8. Lock nut |
| 4. Power button | 9. Handle |
| 5. Control box | 10. Stem |

How to assemble the product

 
1. Turn the lock nut on the control box counterclockwise to loosen it. Then insert one end of the stem into the lock nut and tighten the lock nut.
2. Turn the lock nut on the handle counterclockwise to loosen it. Then insert the other end of the stem into the lock nut and tighten the lock nut.

Adjusting the search coil


1. Loosen the knobs on the search coil and adjust the coil angle until it is parallel with the ground.
2. Tighten the knobs just enough to prevent the search coil from rotating or wobbling.

Installing the battery

1. Loosen the screw on the battery cover with a screwdriver, then remove the battery cover.

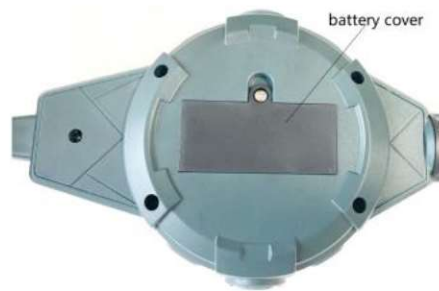

 2. Insert one 9V battery into the compartment. Make sure the polarity is correct. Then put the cover back on and tighten the screw with a screwdriver.

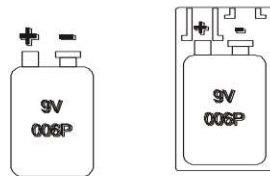

Operation steps

1. Erect the LCD panel.

2. Press and hold the power button on the right side of the control box for about two seconds to turn on the detector. The detector will beep twice and the LCD will display . At this time the detector is ready for detection.

3. Hold the detector in a comfortable position with the search coil parallel to a flat surface where there is no metal objects.

4. Place a sample of coin on the ground, and sweep the coil slowly to find the sample.

5. During searching, the LCD displays . When the detector finds a metallic object,

the detector will sound an alarm and the LCD displays .

 
6. When the flashing battery icon  appears on the LCD, replace the battery. Otherwise, the detector will turn off automatically after four times of audio alarms.

7. Press and hold the power button for about two seconds again to turn off the detector.

Note: The detector will turn off automatically if no button is pressed nor target being detected within 10 minutes.

Hints for searching

1. The detector features a non-motion detection mode. For finding metal targets, you can either hold the detector about 2 cm above the ground and move it forward by walking in step. Or you can sweep the search coil slowly from side to side to detect the target.
2. You may miss a target if you walk too fast. Never swing the search coil like a pendulum.

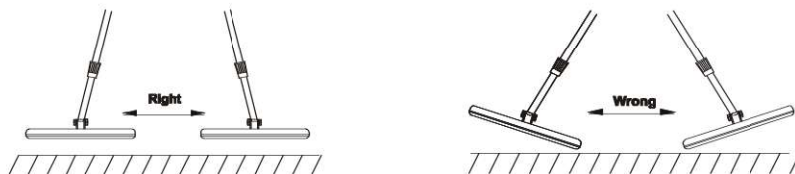

3. In areas with interference, or when the detector becomes less sensitive to metal objects, you can shortly press the power button for resetting.

Important tips:

1. The search coil is not waterproof and must not be submerged.
2. Never attempt to recharge a non-rechargeable battery.
3. Remove exhausted battery to avoid leakage.
4. Handle the detector gently and carefully. Dropping it may damage circuit boards and cases, causing the detector to work improperly.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed-out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S

Omega 5A, Soeflen

DK-8382 Hinnerup

Denmark

www.denver.eu

www.facebook.com/denver.eu

Contact

Main contact point: contact.hq@denver.eu

Nordics

Headquarter

Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail

For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.

Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**
E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A

Ronda Augustes y Louis Lumiere, n° 23 – nave
16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain

Phone: **+34 960 046 883**
Mail: **support.es@denver.eu**

Portugal:

Phone: **+35 1255 240 294**
E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service

Service Center
Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail

support.de@denver.eu

Monday - Thursday 09:00 - 16:30
Friday 09:00 - 14:00

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**
E-Mail: **denver@lurfservice.at**

Poland

LetMeRepair Poland sp. z o.o.

ul. Częstochowska 140
62-800 Kalisz

Phone: **62 75 38 092**
E-Mail: **denver-service@letmerepair.pl**

Godziny pracy: 8 – 18 (poniedziałek – piątek)

If your country is not listed above,
please write an email to
contact.hq@denver.eu



Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

