

DENVER

IFI-140 User Manual
Docking system for iPhone

IMPORTANT SAFETY INSTRUCTIONS



CAUTION
RISK OF ELECTRIC SHOCK.
DO NOT OPEN.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The hazard symbol, within an equilateral triangle, is intended to alert the user to the presence of unshielded, dangerous voltage within the product's enclosure, which may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment. If the waste material (discarded electric and electronic equipment) is not handled correctly,

All cities have established collection points, where electric and electronic equipment can either be submitted for free at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.



- 1 -

DENVER

IFI-140 Guide de l'utilisateur
Station d'accueil pour iPhone

INSTRUCTIONS DE SÉCURITÉ

ATTENTION
RISQUE DE CHOC ÉLECTRIQUE.

ATTENTION: POUR RÉDUIRE LES RISQUES DE CHOC ÉLECTRIQUE, NE SOUVEZ PAS LE COFFRET DE L'APPAREIL (NI LE PANNEAU ARRIÈRE). VOTRE APPAREIL NE CONTIENT AUCUNE PIÈCE RéPARABLE. POUR TOUT PROBLÈME, APPELLEZ VOTRE APPAREIL À UN CENTRE DE SERVICE COMPETENT.

Attention: avec un symbole de flèche à l'intérieur d'un triangle équilatéral, alerter l'utilisateur de la présence d'une "tension dangereuse", non isolée à l'intérieur du coffret, d'une amplitude peut-être suffisante pour présenter un risque de choc électrique pour des personnes.

Le point d'exclamation à l'intérieur d'un triangle équilatéral dans la documentation repère des instructions concernant le fonctionnement et la maintenance (réparation) de l'appareil.

Fabrication d'équipements électriques et électroniques contenant des matériaux, composants et matériaux qui mai être nuisibles pour votre santé et l'environnement (déchets d'équipements électriques et électroniques), sinon traiter correctement.

Fabrication d'équipements électriques et électroniques sont marqués d'une symbole croisé, comme indiqué ci-dessous. Ce symbole signifie que les équipements électriques et électroniques ne doivent pas être jetés avec les déchets ménagers, mais il doit être collectés séparément.


Toutes les villes ont mis en place la collecte des équipements électriques et électroniques peuvent être retournées gratuitement à l'entité stations de retrait et d'autres points de collecte, ou les appareils peuvent être ramassés à la maison. Demandez à vos autorités locales pour plus d'information.




- 2 -

LOCATION OF CONTROLS

TOP VIEW

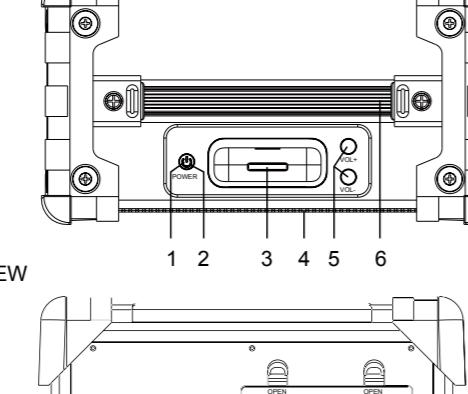

REAR VIEW

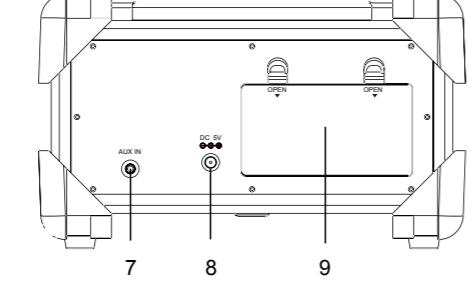

GETTING STARTED

This unit is design to use the supplied AC/DC adaptor or 6 x AA size batteries (batteries not included).

To install or replace batteries:

1. Open the battery door on the rear of unit.
2. Install 6 (x6) AA size batteries into the battery compartment as the polarity markings indicate.
3. Replace the battery door.

NOTES:

1. Alkaline batteries are recommended for longer operation time.

2. In battery operation mode, for saving the battery power the connected iPod/iPhone will not be charged.

BATTERY PRECAUTIONS:

Follow these precautions when using a battery in this device:
1. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.

2. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old and new batteries with fresh ones.

3. Do not charge batteries that have been consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.

4. Do not dispose of batteries in fire. Battery may explodes or leak.

5. Clean the battery contacts and also those of the device prior to battery installation.

AC/DC Adapter:

1. Insert the DC Plug from the supplied AC/DC Adaptor to the DC IN Jack on the rear of unit.

2. Insert the AC/DC Adaptor into wall outlet having AC100-240V-, 50/60Hz

3. When AC/DC Adaptor was connected, the battery power will cut off automatically.

4. This AC/DC Adaptor is intended to be correctly orientated in a vertical or floor mount position.

5. When connecting the iPod/iPhone to the docking, it will be charging automatically.

6. Unplug the AC/DC Adaptor from the wall outlet and take out all batteries.

CARE AND MAINTENANCE

To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.

1. Use the cloth with a soft cloth to clean with a dust cloth and cared for as other furniture, use caution when cleaning and wiping the plastic parts.

2. If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.

3. If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

CLEANING THE UNIT

To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.

1. Use the cloth with a soft cloth to clean with a dust cloth and cared for as other furniture, use caution when cleaning and wiping the plastic parts.

2. If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.

3. If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

Docking and Charging The iPod/iPhone:

This unit is designed with the same connector found in most iPod and iPhone docks. When connecting the supported iPod/iPhone to the docking station on the top of the

unit, The connecting iPod/iPhone will start recharging. You can also playback the music files in the iPod/iPhone as below:

1. Remove the cover of the iPod/iPhone Docking as shown in the figure below: Fig1
2. Insert the iPod/iPhone to the docking as shown in the figure below: Fig2

AUX IN:

To listen to the music from the external audio device or non-decodable iPods as follows:

1. When insert 3.5mm stereo plug to the AUX IN Jack on the rear of unit, it will convert to Aux in automatically; when extract the plug, it will convert to iPod/Auto mode.

2. Connect the external audio device or iPods/Phone by an audio connection cable with 3.5mm stereo plug or with both ends of the cable not included.

3. Insert the external audio device or iPods/Phone to the external audio device or iPods.

Protect Your Furniture:
This model is equipped with non-skid rubber feet to prevent the product from moving when you operate the controls. These feet are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, waxes, preservatives, or cleaning sprays may cause damage to the rubber feet to some degree. Apply a thin coat of rubber resin to the furniture or to your furniture to protect it.

To prevent damage to your furniture, we recommend that you purchase small adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottoms of the rubber/feet before you place the product on fine wooden furniture.

GENERAL INFORMATION

This model is equipped with non-skid rubber feet to prevent the product from moving when you operate the controls. These feet are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, waxes, preservatives, or cleaning sprays may cause damage to the rubber feet to some degree. Apply a thin coat of rubber resin to the furniture or to your furniture to protect it.

To prevent damage to your furniture, we recommend that you purchase small adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottoms of the rubber/feet before you place the product on fine wooden furniture.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

ROBLESHTUNG GUIDE
If you experience difficulties in the use of this Docking System, please check the following

Symptom Possible Problem **Solution**

AC/DC Adaptor **1. Is not plugged in to the outlet.** **Plug the AC/DC Adaptor into wall outlet and plug the connector into the DC IN jack on the back of the unit.**

Unit does not respond to power. **The unit does not respond to the speaker system.** **Your iPod/iPhone is locked.** **iPod/iPhone does not respond to the touch screen.** **iPod/iPhone is not charged.** **iPod/iPhone is frozen.** **iPod/iPhone battery has problem.** **Sound source is distorted.**

Wall outlet is not functioning. **Another device in the same outlet to confirm if outlet is working.**

iPod/iPhone is not charged. **Remove your iPod/iPhone from the dock and connect the iPod/iPhone to the power source.**

Your iPod/iPhone is locked. **Please make sure that your iPod/iPhone is working properly before docking into the unit.**

iPod/iPhone is not responding to touch screen. **Please refer to your iPod/Phone manual for info on how to resolve the issue.**

iPod/iPhone is frozen. **Please make sure your iPod/Phone is working properly before docking into the unit. Please refer to your iPod/Phone manual for info on how to resolve the issue.**

iPod/iPhone battery has problem. **If the iPod/iPhone continues to show signs of power loss, distortion and noise are easily noticed with high-power speakers.**

Sound source is distorted. **If you are using an external sound source like older generation of iPod, try reducing the output volume on the device itself.**

SPECIFICATIONS

General Specifications:

Power Source of Main Unit: DC-5V, 2.5A, Center positive or 6 x AA size batteries (Not included)

AC/DC Adaptor:

Input: AC100-240V~50/60Hz, 0.5A

Output: DC-5V, 2.5A, Center positive

Audio Power: 2x2W

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

- 4 -

Accessories:

1 x User's Manual

1 x AC/DC Adaptor

f
www.facebook.com/denverelectronics
DENVER
ELECTRONICS
www.denver-electronics.com

- 5 -

L'iPad/iPhone est verrouillé bloqué.	Vérifiez que l'iPad/iPhone fonctionne correctement avant de le poser sur le connecteur de l'iPad/iPhone pour configurer celui-ci.
Le son est trop fort	Avec des haut-parleurs puissants et de bonne qualité, comme ceux de votre iPod/iPhone, le son sera plus nettement et plus clairement entendu qu'un iPod. Essayez avec un autre fichier musical.
Le son est déformé	Si vous avez connecté un périphérique avec une source audio de mauvaise qualité à la station, par exemple un ancien iPod, essayez de diminuer le volume sonore directement sur le périphérique.

Vérifiez que l'iPad/iPhone fonctionne correctement avant de le poser sur le connecteur de l'iPad/iPhone pour configurer celui-ci.

Avec des haut-parleurs puissants et de bonne qualité, comme ceux de votre iPod/iPhone, le son sera plus nettement et plus clairement entendu qu'un iPod. Essayez avec un autre fichier musical.

Si vous avez connecté un périphérique avec une source audio de mauvaise qualité à la station, par exemple un ancien iPod, essayez de diminuer le volume sonore directement sur le périphérique.

SPÉCIFICATIONS

Spécifications générales :

Alimentation principale de la station : 5 V continu, 2.5 A, borne positive au centre

Entrée AC/DC : 100-240V~50/60Hz, 0.5A

Sortie : 5V CC, 2.5A, borne positive au centre

Puissance audio en sortie : 2x2W

5 V continu,

2.5 A,

borne positive au

centre

de

à

6 -

E1. iPod/iPhone est à basse qualité.	Pour favoriser que l'iPad/iPhone fonctionne correctement avant de poser sur le connecteur de l'iPad/iPhone pour configurer celui-ci.
E2. Le niveau sonore est trop élevé.	Avec des haut-parleurs puissants et de bonne qualité, comme ceux de votre iPod/iPhone, le son sera plus nettement et plus clairement entendu qu'un iPod. Essayez avec un autre fichier musical.
E3. Le son est déformé.	Si vous avez connecté un périphérique avec une source audio de mauvaise qualité à la station, par exemple un ancien iPod, essayez de diminuer le volume sonore directement sur le périphérique.

Vérifiez que l'iPad/iPhone fonctionne correctement avant de le poser sur le connecteur de l'iPad/iPhone pour configurer celui-ci.

Avec des haut-parleurs puissants et de bonne qualité, comme ceux de votre iPod/iPhone, le son sera plus nettement et plus clairement entendu qu'un iPod. Essayez avec un autre fichier musical.

