

LOCATION OF CONTROL

- | | |
|---------------------|----------------------------|
| 1. FM ANTENNA | 10. VOL+/- |
| 2. SKIP+ | 11. OPEN/CLOSE |
| 3. SKIP- | 12. PAUSE, STOP/EJECT, |
| 4. M-/RE/PR/CLOCK | FAST FORWARD, REWIND, PLAY |
| 5. M+/EQ | 13. LCD DISPLAY |
| 6. PLAY/PAUSE/SCAN | 14. CASSETTE DOOR |
| 7. STOP/MEMO/SLEEP | 15. AUX IN JACK |
| 8. CD DOOR | 16. PHONE JACK |
| 9. STANDBY/FUNCTION | 17. AC INLET |

CD OPERATION PROGRAM

Up to 20 tracks can be programmed for disc play in any order. Be sure to press the "STOP" button before use.

1. Press the RE/PR button, the display will show "P01".
2. Select desire track by pressing SKIP+ or SKIP-.
3. Press RE/PR button again to confirm.
4. Repeat step 2 & 3 to enter the tracks into program memory.
5. When all desired tracks have been programmed.
Press PLAY/PAUSE button play the program.
6. Press the STOP button twice to terminate the program.

REPEAT

Press the RE/PR button during playing CD, a single track or all tracks can be repeated.

Each press switches the repeat mode as following :

- 1 - REPEAT 1
- 2 - REPEAT ALL
- 3 - RANDOM
- 4 - NORMAL PLAYBACK



AC POWER

You can power your portable system by plugging the detachable AC power cord into the AC inlet at the back of the unit and into a wall AC power outlet. Check that the rated voltage of your appliance matches your local voltage. Make sure that the AC power cord is fully inserted into the appliance

GENERAL OPERATION

- At standby mode, press the "STANDBY/FUNCTION" button to switch on the unit.
- Press the "STANDBY/FUNCTION" button once to switch other mode. (CD/ TAPE/FM/AUX-IN.)
- Press and hold the "STANDBY/FUNCTION" button for 2 seconds to switch off the unit in all modes.
- Press the "VOL+" or "VOL-" button to adjust volume level

CLOCK SET

Clock set must be at standby mode.

1. Press and hold the "CLOCK" button 2 seconds, the LCD will show "24H" and flashing
2. Press the "SKIP+" or "SKIP-" button to select "12H" or "24H", press the "CLOCK" button to confirm.
3. Adjust the hour by press the "SKIP+" or "SKIP-" button and then press the "CLOCK" button to confirm.
4. Adjust the minute by press the "SKIP+" or "SKIP-" button and then press the "CLOCK" button to confirm.

EQ

EQ type: ROCK-JAZZ-POP-CLASSIC-FLAT

Press and hold the "EQ" button 2 seconds to enter EQ setting.

Press the "EQ" button again to choose the correct setting.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER®

www.denver-electronics.com



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Imported by:
DENVER ELECTRONICS A/S
Stavneagervej 22
DK-8250 Egaa
Denmark

www.facebook.com/denverelectronics