


## ENG TR-55C AC/DC FM Radio

### Introduction

Welcome to the Instruction for the TR-55C AC/DC FM Radio. This guide provides step-by-step instructions, with simple explanations to get you up-and-running.

1. ROD ANTENNA
2. CARRYING HANDLE
3. RADIO TUNING CONTROL
4. HEADPHONE JACK
5. VOLUME CONTROL
6. POWER OFF / FM RADIO SELECTOR
7. BATTERY COMPARTMENT COVER (rear cabinet)
8. AC SOCKET (rear cabinet)

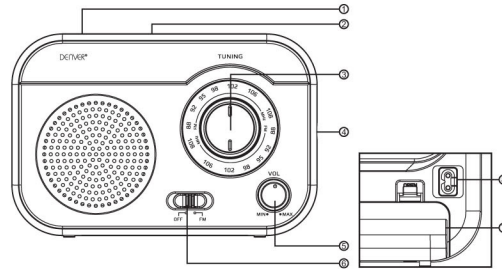

### OPERATING INSTRUCTION

#### Battery Supply

Open the battery compartment and insert as indicated in the compartment three Batteries, type R14, UM2 or C cells.

The battery supply is switched off when the set is connected to the mains. To change over to battery supply, pull out the plug from the MAINS socket.

#### Mains Supply

Connect the mains lead to the wall socket. The mains Supply is switched on.

To disconnect the set from the mains completely, withdraw the mains plug from the wall socket.

#### Radio

1. Turn on the radio by select the OFF / FM RADIO SELECTOR in FM mode.
2. Adjust the sound with the controls VOLUME.
3. You may connect stereo headphones with 3.5mm, plug to socket PHONES. The loudspeakers are then muted.
4. Tune to a radio station using TUNING knob.

### SPECIFICATIONS

Speaker:	3 inches, 8 ohm dynamic speaker
Power Output:	0.8W
Battery Operate:	DC 4.5V (3 x "UM-2 / C")
AC Operate:	230V ~ 50Hz

### PRECAUTIONS:

1. For AC operation, make sure the voltage is compatible. Always use the provided AC power cord; never use other AC power cord.

For DC operation, simply insert three "UM-2 / C" batteries for unit operation.

2. Always disconnect the AC power cord from the AC power source when it is not in use or when DC power is operating.
3. Do not leave the batteries in the compartment for a long time. Remove the batteries to avoid leakage and damage.
4. Do not expose the unit to extreme temperature nor high humidity to ensure normal functioning for a long lifetime.

For instances, never place the unit in bathing areas nor around stoves and radiators.

5. If you find the unit is not working properly, please take it to your nearest services centre. Do not attempt to repair by yourself.

### WARNING :

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet, refer to service agent or qualified engineer only.

### To improve reception:

- For FM, pull out the telescopic aerial. To improve FM Reception incline and turn the aerial, reduce its length if the FM-signal is too strong (very close to a transmitter).

ALL RIGHTS RESERVED COPYRIGHT DENVER  
ELECTRONICS A/S

DENVER®  
www.denver-electronics.com



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

### Importer:

DENVER ELECTRONICS A/S  
Stavneagervej 22  
DK-8250 EGAA  
DENMARK