

## Nomenclature



1. M : Previous menu, Sub menu
2. >> : Forward
3. V : Volume control
4. << : Backward
5. ▶ : Enter, Play, Pause, Power on/off
6. LCD display
7. USB port
8. Main power on/off switch
9. Earphone jack
10. Micro SD slot

Page 3

### Basic operations

#### Turn on device

When Main Power Switch is turned off, slide button to turn on device

When Main Power Switch is turned on, long press [□] to turn on device.

#### Turn off device

When device is turned on, long press [□] to turn off device.

If device functions abnormally, slide Main Power Switch button to forcefully turn off device. Due to possible data loss, it is recommended to turn off device by long pressing [□] button.

#### Key function

[Backward/Forward] : move up/down or right/left.

[M] : short press to go back to previous menu and long press to show sub-menu option.

[□] : short press to enter into menu, play or pause and long press to turn off device.

[V] : press to show volume control and use [Backward/Forward] key to adjust volume.

To prevent possible hearing damages, a warning sound will appear when the volume reaches the warning volume.

#### Adding/Removing files/Folders

- Use device as a removable USB storage

1. Connect device to computer using provided USB cable.
2. Select "USB Disk" and Add files/folders into it by dragging or copying and pasting them.
3. Delete files from the removable USB storage (use the "Delete" command).

#### Disconnecting device from PC

- Follow the steps to avoid damaging device or losing data.

1. Left click mouse on the icon that is on the taskbar at the bottom right corner of the desktop.
2. Click "Safely remove USB Mass storage Device".
3. Disconnect the player from your computer.

#### Connecting to Bluetooth speaker/headphone

This device can connect to Bluetooth speaker and headphone that supports A2DP, AVRCP profiles.

#### Turn on/off Bluetooth

Select "Setting" on main menu. Press [□] to enter, select "Bluetooth" and press [□].

Select "Bluetooth status" and press [□] to show on/off menu.

Press [Backward/Forward] to select On/Off and press [□] to turn on or off.

#### Pairing device

Set "Pairing mode" of Bluetooth speaker or headphone.

Go to "Device search" and press [□] to show "Please wait" message. Wait until this message disappears.

(Time for searching device depends on number of devices nearby and it can take up to 1~3 minutes depending on the environment).

Connecting/Disconnecting/Unpairing device

Go to "device list" and press [ ] to see list of devices.

Select desired device and press [ ] to show pop-up menu shown below.

Connecting device : select "Bluetooth connecting" and press [ ] to connect.

Once connected a sound will be played through the speaker or headphone.

Unpairing device : select "Bluetooth unpairing" and press [ ] to unpair.

Disconnecting device : select connected device and press [ ] to show pop-up menu and select "Bluetooth disconnected" to disconnect.

Music

Select "Music" on main menu and press [ ] to enter.

Press 【Forward/Backward】 to select music files and press [ ] to playback and pause.

Music Playback Submenu

On music playback mode, short press 【 M 】 to enter submenu and short press 【Forward/Backward】 to select your desired mode.

Now playing : Enter into music playback mode of currently playing music

All Music : show all music from internal memory

Artist : show music sorted by artist

Album : show music sorted by album

Genre : show music sorted by genre

My Music list : show playlist chosen by user

Dir list : show file/folder of internal or external memory

Record list, My rating, Tag list: show recorded files, rating files and tag list

Setting

On music playback mode, long press 【 M 】 to enter pop-up menu and adjust device's function according to user's preference.

Photo

Select "Photo" on main menu and press [ ] to enter.

File browsing

Dir List : browse image files from external or internal memory

Photo viewing

Play/Pause slide show : On viewing photo, press [ ] to play/pause slide show.

View next/previous photo : On viewing photo, 【 Forward/Backward 】 to view next/previous photo

Setting

Scan mode : Select viewing mode.

Slide effect : Select slide effect.

Slide interval : Select slide interval.

Recorder

Select "Recorder" on main menu and press [ ] to enter.

Sound recording

Start/pause recording : Press [ ] to start recording and press it again to pause.

Save recording file : while recording, long press 【 M 】 to save file.

Return to Main Menu : while recording is paused, press 【 M 】 to return to Main Menu

Browser


Select "Browser" on main menu and press [ ] to enter.

Browse image files from external or internal memory and choose your desired files including video files, music files, photo files, recorded files, etc.

Setting

Select file/folder, long press **【 M 】** to enter pop-up menu and select move, copy or delete according to user's preference.

Setting

Select "Setting" on main menu and press [  ] to enter.

Display : Adjust brightness and Backlight time

Power saving : Adjust idle time and sleep time

Date & Time : Adjust date and time

Language : Select menu language

Advanced : View device information, adjust Effect Setting, Select Key tone, Format memory, etc

**DENVER**<sup>®</sup>  
denver-electronics.com  
www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Imported by:  
DENVER ELECTRONICS A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark  
[www.facebook.com/denverelectronics](http://www.facebook.com/denverelectronics)

Hereby, Inter Sales A/S, declares that this model DENVER (MPG-4084CBT) is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

A copy of the Declaration of Conformity may be obtained at

Please enter: [www.denver-electronics.com](http://www.denver-electronics.com) and then click the search ICON on topline of website. Write modelnumber: MPG-4084CBT

Now enter product page, and red directive is found under downloads/other downloads

Operating Frequency Range: 2.4GHZ-2.480GHZ

Max Output Power: 4dbm