 
 


DENVER®

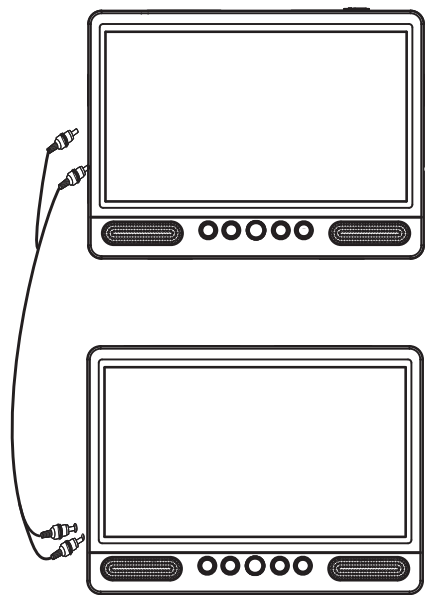

USER'S MANUAL

MTW-1085TWIN

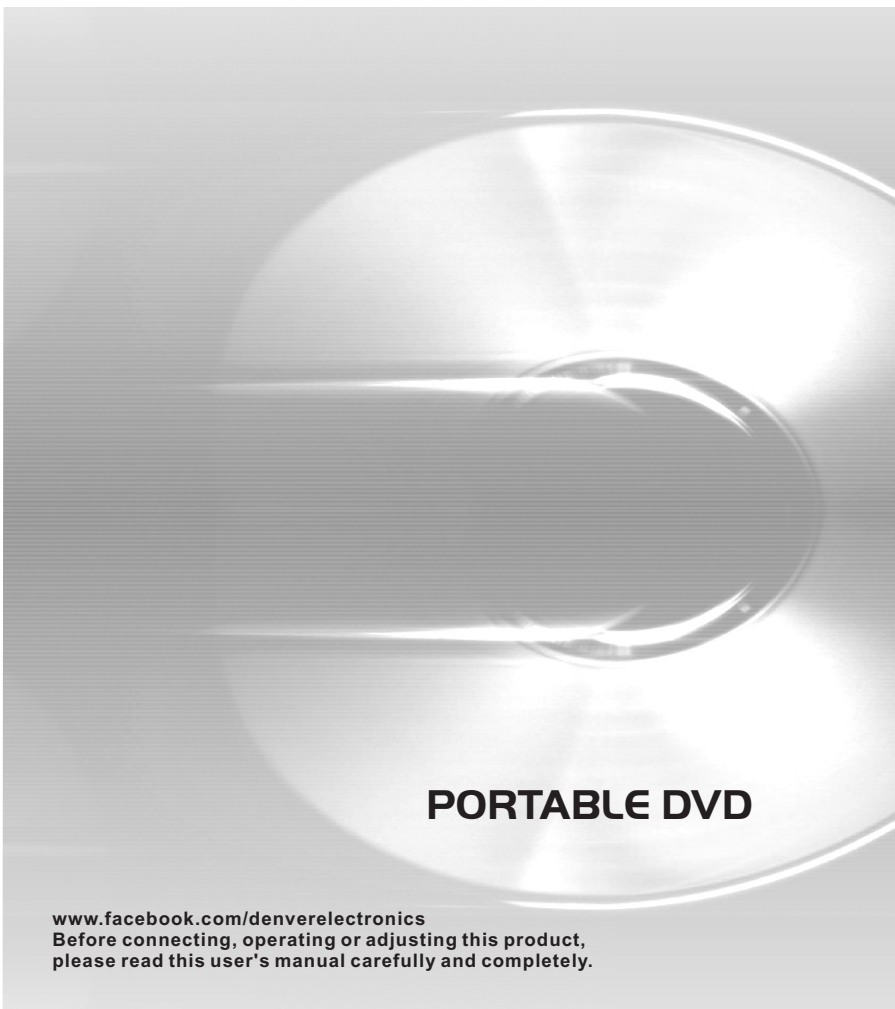

PORTABLE DVD

 
www.facebook.com/denverelectronics

Before connecting, operating or adjusting this product,
please read this user's manual carefully and completely.

Identification of Controls


Main Unit

MASTER TFT SCREEN

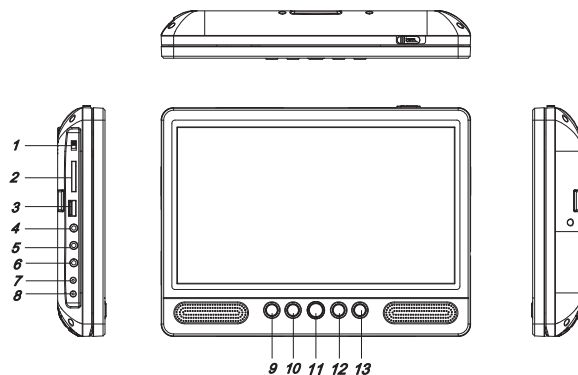


1. POWER ON/OFF
2. CARD SLOT
3. USB
4. HEADPHONE OUT JACKS
5. AV OUT
6. AV IN
7. DC OUT
8. DC IN 9-12V
9. UP/ Prev
10. DOWN/Next
11. SOURCE
12. ►|| (PLAY/PAUSE)
13. ■ STOP
14. DC IN
15. AV IN
16. HEADPHONE OUT JACKS
17. POWER ON/OFF
18. UP
19. DOWN
20. MODE
21. LEFT /VOL-
22. RIGHT/VOL+

 MONITOR TFT SCREEN

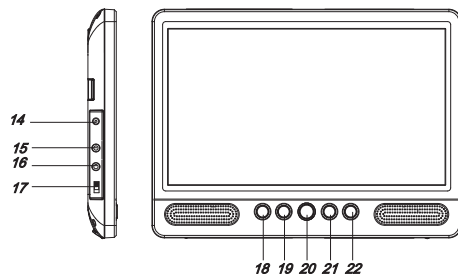

Identification of Controls

 Remote control unit

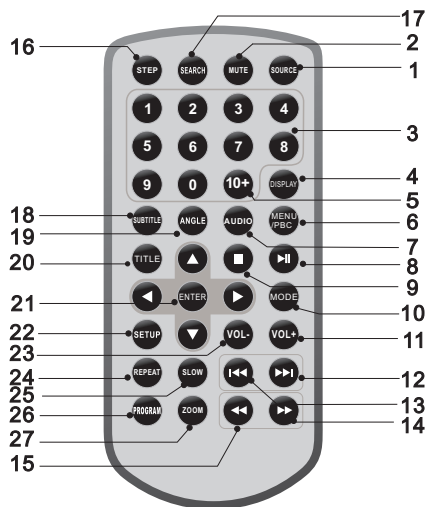

1. SOURCE

DVD/CARD/USB.

2. MUTE

Disable Audio output.

3.0-9 NUMBER BUTTON

Selects numbered items in a menu.

4.DISPLAY

To display the playtime and status information.

5.10+ BUTTON

In order to select a track 10 or greater, first press 10+, For example; select track 12, first press 10+, and then press number 2 button.

6. MENU/PBC

Return to DVD root menu(DVD).
PBC on/off switch (VCD) .

7.AUDIO

DVD:Press AUDIO repeatedly during playback to hear a different audio language or audio track, if available.
CD/VCD:Press AUDIO repeatedly during playback to hear a different audio channel (Left,Right,Mix,Stereo).

8.PLAY/PAUSE

Press PLAY/PAUSE once to pause playback, pressing PLAY/ PAUSE second time will resume the playback.

9.STOP

When this button is pressed once, the unit records the stopped point,from where playback will resume if PLAY(▶)is pressed after wards. But if STOP button is pressed again instead of PLAY(▶) button, there will be no resume function.

10.MODE

Set LCD parameter(adjust bightness, contrast,and saturation).

11.VOL+

12.Forward Skip

Go to next chapter/ track.

13.Reverse Skip

Go to previous chapter/ track to the beginning.

14. ►► BUTTON

Press ►► BUTTON allow skipping ahead at 5-level speed(X2->X4-> X8->X16->X32->PLAY), press PLAY button return to normal playback.
Parental password : "1369"

Identification of Controls

Remote control unit

15. ⏮ BUTTON

Press ⏮ BUTTON allow skipping back at 5-level speed(X2->X4->X8->X16->X32->PLAY), press PLAY button return to normal playback.

16. STEP

Step the motion in DVD mode.

17. SEARCH

Goto time point , title or chapter you want in DVD Mode.

18. SUBTITLE

Press SUBTITLE repeatedly during playback to hear a different subtitle languages.

19. ANGLE

DVD: Press ANGLE will change the view angle, on DVDs that support this feature.

20. TITLE

Return to DVD title menu

21. ENTER

Confirms menu selection..

22. SETUP

Accesses or removes setup menu.

23. VOL-

Adjust volume

24. REPEAT

Press REPEAT during playback to select a desired repeat mode.

DVD: you can play select repeat chapter/title/off.

VCD/CD: you can select repeat single/all/off.

JPG: you can select repeat single/folder/off.

25. SLOW

Press Slow button repeatedly to enter slow playback, and cycle between different speeds. The speeds are 1/2, 1/4, 1/8, 1/16, and normal.

26. PROGRAM

DVD/VCD: The program function enables you to store your favourite tracks from the disc. Press PROGRAM button ,then PROGRAM MENU will appear on screen, now you can use the number key to direct input the titles, chapters or tracks number and select PLAY option. TO resume normal playback, press PROGRAM and select clear program option on the program menu, press PROGRAM again to exit program menu.

27. ZOOM

DVD/VCD: Use ZOOM to enlarge or shrink the video image.

1. Press ZOOM during playback or still playback to activate the Zoom function. The square frame appears briefly in the right bottom of the picture.

2. Each press of the ZOOM button changes the TV screen in the following sequence:

2X size → 3X size → 4X size → 1/2 size → 1/3 size → 1/4size → normal size

JPEG: Use ZOOM to enlarge or shrink the picture.

 
1. Press 'ZOOM'.

2. Use " ►► " to enlarge, or " ◀◀ " to shorten the picture.

Use the ▲▼◀▶ button to move through the zoomed picture.

Monitor TFT Menu Setting

Picture Page

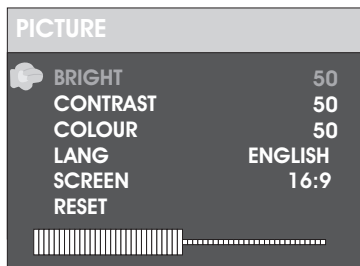

Bright

Adjust screen Bright Setting.

Contrast

Adjust screen Contrast Setting.

Colour

Adjust screen Color Setting.

LANG

Adjust Menu OSD Language

SCREEN

Adjust screen 16:9 or 4:3

RESET

Reset to default setting.

Parameters and specifications

Battery Parameters

Battery Specifications:

Output: 7.4V

Storage and work circumstances:

1. Storage circumstances	Temperature	Humidity
6 months	-20℃ ~+45℃	65±20%
1 week	-20℃ ~+65℃	65±20%
2.Work circumstances	Temperature	Humidity
Standard charge	0℃ ~+45℃	65±20%
Standard discharge	-20℃ ~+65℃	65±20%

Electrical parameters

Item		Standard requirement
Power requirements		: AC 100-240 V , 50/60 Hz
Power consumption		: <15W
Operating humidity		: 5 % to 90 %
Output	VIDEO OUT	: 1 Vp-p (75Ω)
	AUDIO OUT	: 1.0 Vrms (1 KHz, 0 dB)

System

Laser	: Semiconductor laser, wavelength 650 nm
Signal system	: NTSC / PAL
Frequency response	: 20Hz to 20 kHz(1dB)
Signal-to-noise ratio	: More than 80 dB (ANALOG OUT connectors only)
Dynamic range	: More than 80 dB (DVD/CD)

Note: Design and specifications are subject to change prior notice.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER®

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Please fill the blank with the model number of this player for future reference

Imported by:

DENVER ELECTRONICS A/S

Omega 5A, Soeften,

DK-8382 Hinnerup

Denmark

www.facebook.com/denverelectronics