

# DENVER®

---

## **SMART TV with DVB-T2/S2/DVB-C and H.265/HEVC Support**

**Model: LDS-5070**



## **User's Guide**

**NOTE:**

**Read all of the instructions before using this TV and keep the instruction manual in a safe place for future reference.**

# Contents

---

<b>Safety Information</b>	<b>1-3</b>
---------------------------	------------

---

<b>Product Introduction</b>	<b>4</b>
-----------------------------	----------

---

<b>Connections</b>	<b>5</b>
--------------------	----------

---

<b>Remote Control</b>	<b>6-7</b>
-----------------------	------------

---

<b>Customizing TV Settings</b>	<b>13-28</b>
--------------------------------	--------------

# Safety Information

---

*IMPORTANT SAFETY INSTRUCTIONS - READ CAREFULLY BEFORE USE.*

*Take note of the following safety information which appears on the back of the TV.*

---



CAUTION TO PREVENT ELECTRICAL SHOCK, DO NOT REMOVE ANY COVER SCREWS, NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

---



This symbol indicates that there are important operating maintenance instructions in the literature accompanying this unit.

---



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

---

## *Keep these instructions*

- Do not use this TV near water.
  - Clean only with a slightly damp cloth.
  - Do not block any ventilation openings.
  - Install in accordance with the supplied Quick Start Guide and this User Guide.
  - Protect the power chord from being walked on or pinched, particularly at plugs, and the point where it exits from the TV.
  - Do not allow the power chord to overhang the edge of a table.
  - Unplug this TV during lightening storms or when unused for long periods of time.
- 



**WARNING! TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS TV TO RAIN OR MOISTURE. THE TV MUST NOT BE EXPOSED TO DRIPPING AND SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE TV.**

---

NOTE: No naked flames such as candles should be placed on the TV.

---

## IMPORTANT SAFETY INFORMATION (Continued)

This unit has been produced according to all current safety regulations. The following safety tips should safeguard users against careless use and the dangers connected with such use.

- Although this appliance has been carefully manufactured and rigorously checked prior leaving the factory, as with all electrical appliances it is possible for problems to develop. If you notice smoke, an excessive build up of heat or any other unexpected phenomena, you should disconnect the plug from the mains power socket immediately.
- Ensure that the unit is sufficiently ventilated! Never place next to or underneath curtains!
- The mains plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- This set should only be connected to a mains power supply which matches that stated on the label on the rear of the TV – do not attempt to connect it to any other type of supply.
- The socket – outlet must be installed near the equipment and easily accessible.
- To prevent overload, don't share the same mains supply socket with too many other items of equipment.
- Apparatus with Class 1 construction shall be connected to a mains socket outlet with a protective earthing connection.
- Keep away from rodents. Rodents enjoy biting into electric flexes.
- Always hold the plug when pulling out the plug from the mains supply socket. Do not pull on the flex, the flex can become overloaded and cause a short circuit.
- Set up the unit so that no one is able to trip over the flex.
- Do not place heavy items on the flex, which may damage it.
- Take note that the flex cannot be reached and pulled by young children, avoiding injury.
- Do not set up the unit near to heat sources. The casing and the flex could be damaged by the impact of heat.
- The screen is made of plastic and can break if damage is done to it. Be careful when collecting sharp edged plastic splinters to avoid injury.
- Avoid placing the unit on any surfaces that may be subject to vibrations or shocks.
- To protect the unit during a thunderstorm unplug the AC power cable and disconnect the aerial. Caution: Do not touch the aerial (RF) connector.
- When you leave your home for long periods of time, unplug the AC power cable for safety reasons.
- The unit becomes warm when in operation. Do not place any covers or blankets on the unit in order to prevent overheating. The ventilation holes are not to be blocked. Do not set up near radiators. Do not place in direct sunshine. When placing on a shelf leave 5 cm (2") free space around the whole unit.
- Do not allow water or moisture to enter the TV. Do NOT use in wet or moist areas such as Bathrooms, steamy kitchens or near swimming pools.
- Do not use this unit when moisture condensation may occur
- Any repairs must be carried out by qualified personnel only.
- Do not open this unit. A non – expert attempting to repair the unit could be dangerous and potentially cause a fire hazard.

# Safety Information

---

## IMPORTANT SAFETY INFORMATION (continued)

- Liquids spilt into the unit can cause serious damage. Switch the set OFF and disconnect the mains power supply, then consult a qualified service person before attempting to use the unit again.
- Do NOT remove the safety covers. There are no useable or serviceable parts inside. You may invalidate the warranty. Qualified personnel must only service this apparatus.
- Do NOT tap or shake the screen, you may damage the internal circuits. Take good care of the remote control, do not drop.
- Never place hot objects or open flame sources on or close to the TV.
- High temperatures can melt plastic and lead to fires.
- To clean the TV use a soft dry cloth. Do NOT use solvents or petrol based fluids. For stubborn stains, you may use a damp cloth with dilute detergent.

## Headphone Warning

Loud music can damage your hearing irreversibly, therefore do not set the volume to a high level when listening through headphones, particularly for lengthy listening periods.

## Where to install

Locate the television away from direct sunlight and strong lights, soft indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen. Place the TV on a sturdy platform of which the surface should be flat and steady. This will prevent it from falling over.

Make sure the television is located in a position where it cannot be pushed or hit by objects, as pressure will break or damage the screen, and so that small objects cannot be inserted into the ventilation slots or openings in the cabinet.

## Smell/odor from TV

New televisions may produce an unusual smell or odor when first turned on.

 
Due to the manufacturing process of components, televisions and other electronic products can have parts that may produce a smell after the product is first turned on and warms up.

The smell will usually dissipate within a few days of use and does not return.

This is normal and occurs with many electronic products. Please ensure there is sufficient ventilation around the TV and in the room and the odor will dissipate.

---

## Front View

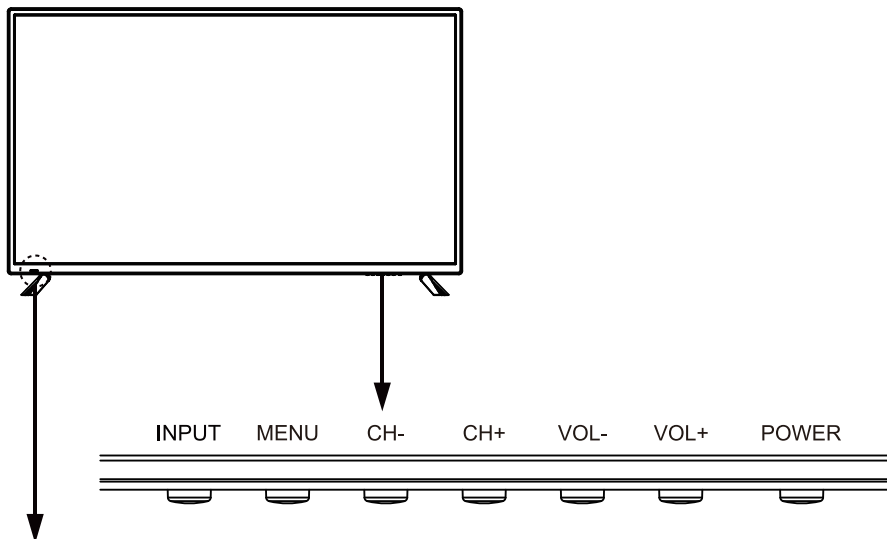

LED indicator Remote Control window(keep clear)

### The functions of the TV buttons are described below.

**POWER/STANDBY:** Turn on/off the TV set.

**INPUT:** Press to select the source.

**MENU:** Press to display the OSD menu, Press again to exit the menu.

**CH+/CH-:** Press to scan through channels.

 
They are also can be used to move down/up in the OSD menu screen.

**VOL+/VOL-:** Press to adjust the volume.

They are also can be used to move left/right in the OSD menu screen.

VOL+ button can be used to skip forward to next menu.

# Connections

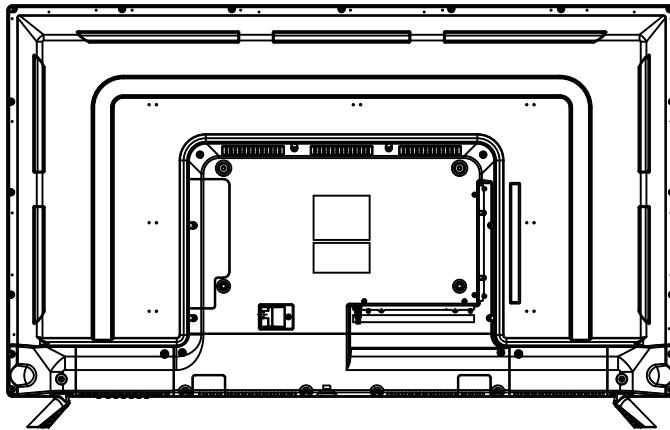

LAN (RJ45)    HDMI1    HDMI2    VGA    PC AUDIO    SCART

HDMI3    TV1(S2)    TV2(T2/C)    USB (1.1)    USB (2.0)    OPTICAL    Common Interface    MINI YPbPr    MINI AV    5V=500mA

**LAN(RJ45):** RJ45 plug for connecting to external modem or network access equipment.

**VGA:** For PC display. Connect it to the D-Sub 15 pins analog output connector of the PC.

**PC AUDIO:** Connect it to the audio output terminal of PC.

**HDMI:** Connect DVD/Blu-ray player or other equipment.

**SCART:** Connect them to the SCART video output terminal of DVD.

**TV1(S2):** Connect a Satellite signal.

**TV2(T2/C):** To connect to the aerial socket on the wall with the RF coaxial cable.

**OPTICAL:** Connect to an external digital audio device.

**Common Interface:** CI slot.

**MINI YPbPr:** Connect it to the YPbPr video output terminal of DVD with the Converter cable.

**MINI AV:** Connect it to the audio & video output terminal of DVD with the Converter cable.  
(Audio terminals are shared with YPbPr)

 : Connect it to your headphone or other audio equipment.

**USB:** Connect to USB device for multimedia .

The remote control is using Infra-Red(IR). Point it towards the front of the LED TV. The remote control may not work correctly if it is operated out of range or out of angle.



: Switch the TV between On and Standby mode.

: Mute and restore TV sound.

**0~9**: Select a program.(ATV/DTV mode).

**CH.LIST**: Display program list.

: Return to the previous viewing channel.

**APP**: Press to select the desired APP.

**MENU**: Display the main menu.

**SOURCE**: Select among the different input signal sources:TV/AV/COMPONENT/HDMI1/HDMI2/HDMI3/VGA/USB.

**◀ ▶ ▲ ▼**: Allows you to navigate the on screen display menus and adjust the system settings to your preference.

**OK**: Confirm the selection.

**RETURN**: Return to previous menu.

**EXIT**: Exit the on screen display menu.

**INFO**: Display the present screen information such as the current channel and input source.

**VOL +/-**: Adjust the volume.

**CH** : Select the channel.

**EPG**: To show the Electronic Program Guide during no- menu state only in DTV mode.





⏮: Skip to the beginning of the previous chapter/track/photo.

TTX: Enter the Teletext.

⏪: Start playback or pause.

**TIMESHIFT:** Press the button to pause current DTV program and start record background (Used for models with DTV function only).

⏭: Skip to the beginning of the next chapter/track/photo.

**HOLD:** Hold or carry on the current subpage.

⏪: Reverse playback rapidly.

**CANCEL:** Cancel the Teletext display.

■: Stop the playback.

**FAV:** Display the favorite channel list.

⏭: Advance playback rapidly.

**REVEAL:** Reveal any hidden text.

**SIZE:** Press to see top half of page double size, press again to see the bottom half of page double size. Press again for normal size.

**SUBPAGE:** Press to enter subpages, press again to cancel.

**RECORD:** Start to record.

**I/II AUDIO:** Switch the available sound-track.

**INDEX:** Go to index.

**SUBTITLE:** Turn on/off the subtitle display in DTV mode and DVD mode.

# Customizing TV Settings

 
## Turning On/Off Your TV

- Connect the power cord to the power socket after you have completed all the physical connections. At this stage, the TV will enter Standby Mode and the red LED indicator will illuminate.
- In Standby Mode, press the **⏻** button on the main unit or on the remote control to turn the TV on. The red LED indicator will turn blue.



The **POWER** button on the main unit or on the remote control can only switch the TV into standby. To completely turn off the TV, please disconnect the power cord from the power socket.

## Initial Setup

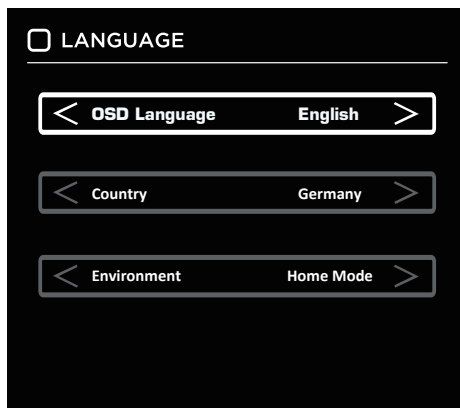


- The first time you turn the TV on, it will go into the Setup Wizard. Press the **Arrow** buttons to highlight and select your desired mode and press **OK** to confirm.


1

# Customizing TV Settings

 
## Initial Setup

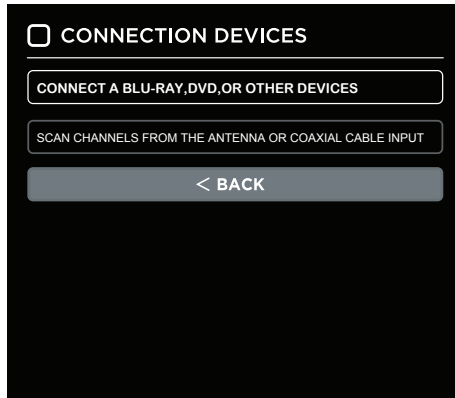

2

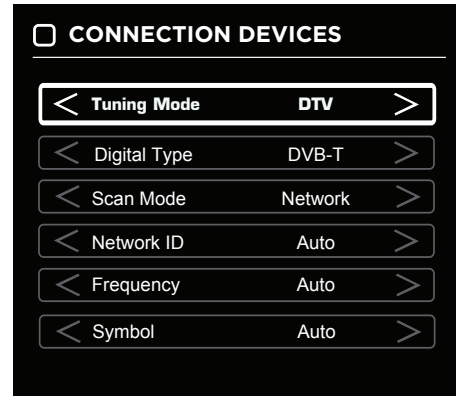 

3

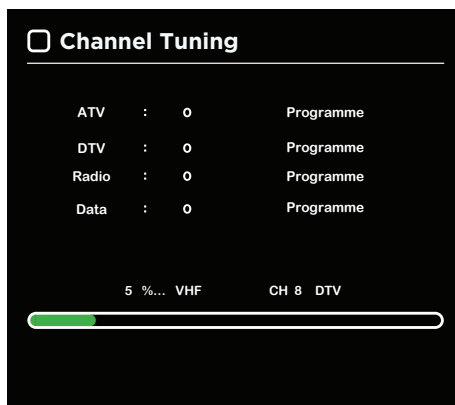 


4

- If channels cannot be found, this frame will be displayed automatically.

# Customizing TV Settings
 
## Source

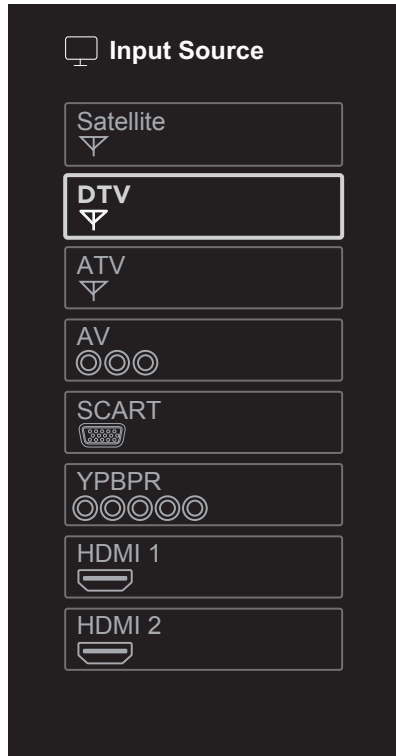

- Press **SOURCE** on the remote control or on the main unit to display the source menu, then use the **Arrow** buttons to cycle among the different input sources: TV/AV/COMPONENT/HDMI/VGA/USB, then use the **Arrow** buttons to highlight the desired source and press **OK** to confirm.

## Channel Selection

- Press the **CH<sup>^</sup>/CH<sup>v</sup>** buttons on the main unit or on the remote control repeatedly to select the channel.
- Press the **0-9** buttons on the remote control to select the channel directly.



---

Press "4", and then press **OK** button to select channel 4.  
Press "4" and "5", and then press **OK** button to select channel 45.  
Press "1", "2" and "3", and then press **OK** button to select channel 123.

 
---

## Volume Adjustment

- Press the **VOL+/-** buttons on the main unit or on the remote control to adjust the volume.
- If you wish to switch the sound off, press the **MUTE** button again or the **VOL+** button to resume the sound.

# Customizing TV Settings

## Streaming

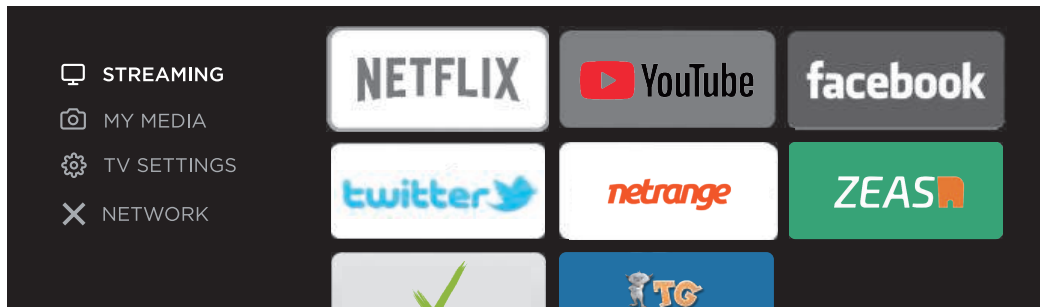


- Press **MENU** button on the main unit or on the remote to display the main interface. Then use the Arrow buttons to select **STREAMING** and press **OK** to enter. Use the **Arrow** buttons to select the desired APP and press **OK** button to view. Or press the hotkey on the remote control to enter the desired APP directly.

<b>NETFLIX</b>	Enjoys TV shows & movies streamed instantly over the Internet.
<b>YouTube</b>	YouTube your way on the best screen in your house.
<b>Facebook</b>	Facebook is an American online social media and social networking service company based in Menlo Park, California.
<b>Twitter</b>	Twitter is an online news and social networking service on which users post and interact with messages known as "tweets".
<b>Netrange</b>	As one of the pioneers of Smart TV, NetRange is the leading global provider of white labeled, turnkey Smart TV and OTT ecosystems.
<b>ZEAS</b>	Provide tmassive on-demand films, one-touch access wonderful films
<b>FOXXUM</b>	Foxxum provides Smart TV Solutions in close collaboration with leading brands at all stages of the global consumer electronics value chain from Silicon Vendors, though Device Manufacturers, Operators to Content Partners in order to add value to their products.
<b>TOON GOGGLES</b>	Toon Goggles is an American on-demand entertainment service for children that offers animate shows, games and music worldwide via.

# Customizing TV Settings


 
## Media

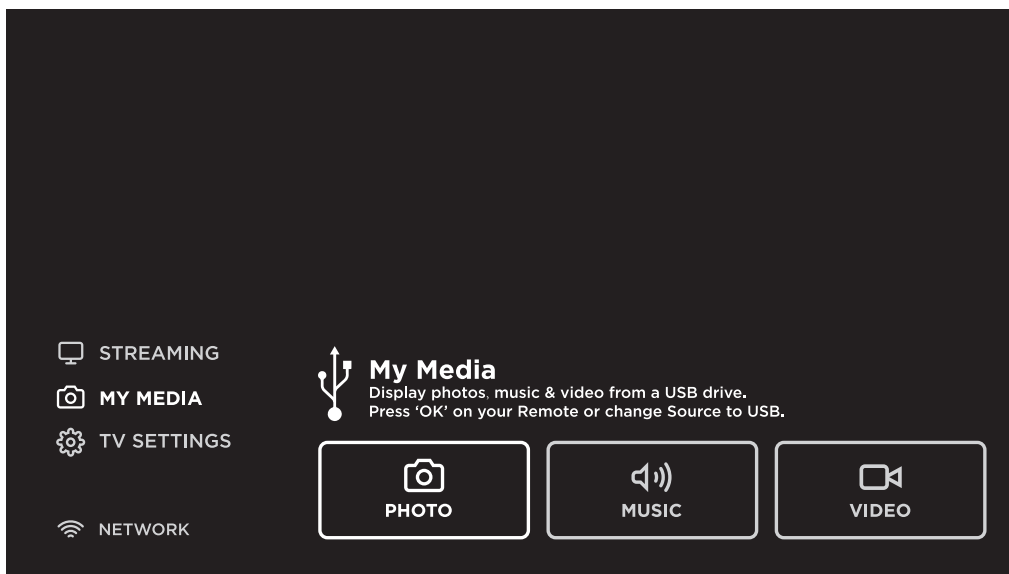


- Press **MENU** button to display the main interface, then use the **Arrow** buttons to highlight **MY MEDIA** and press **OK** to confirm. Select among Photos, Music and Video to view what you like.

**Note:** Portable drives should be inserted before entering **MY MEDIA** menu.

## Viewing Photos

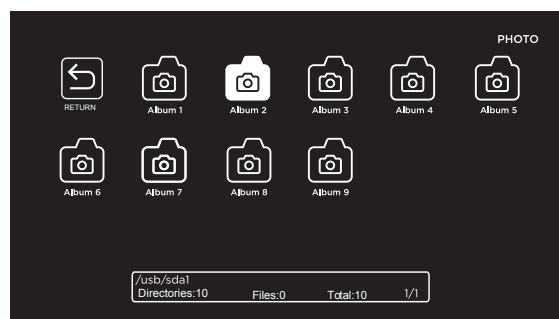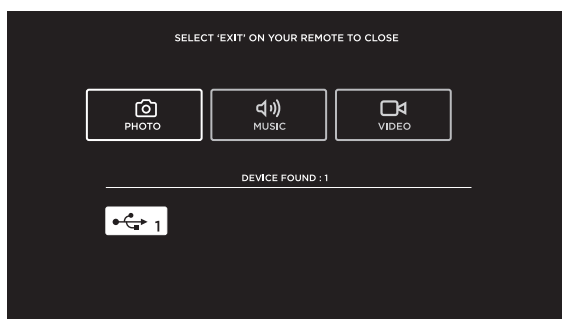  


 
- Use the **Arrow** buttons to highlight the **PHOTOS** option and press **OK**, then it will jump to confirm the inserted drive, press **OK** to enter. After entering **PHOTOS**, use the **Arrow** buttons to select the picture file and press **OK** to enter.

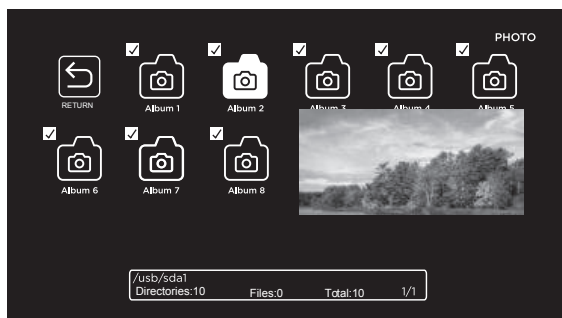


- After entering the picture file, use the **Arrow** buttons to select the desired picture, then press the **▶▶** to display. When the picture is playing, the picture Function Bar will be displayed. Use the **Arrow** buttons to select the desired function available on the bar.

# Customizing TV Settings
  
## Listening To Music

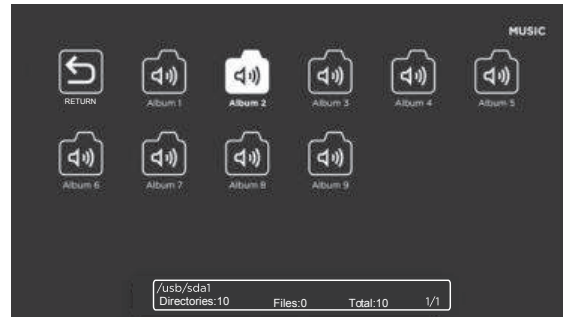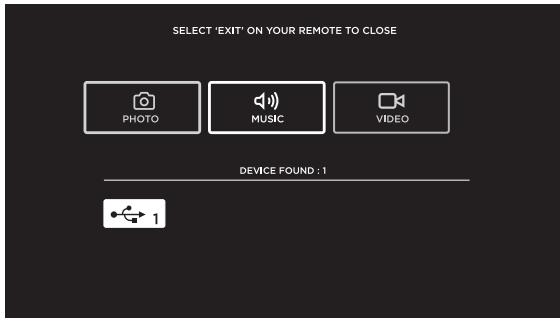


 - Use the **Arrow** buttons to highlight the **MUSIC** option and press **OK**, then it will jump to confirm the inserted drive, press **OK** to enter. After entering **MUSIC**, use the **Arrow** buttons to select the audio file and press **OK** to enter.


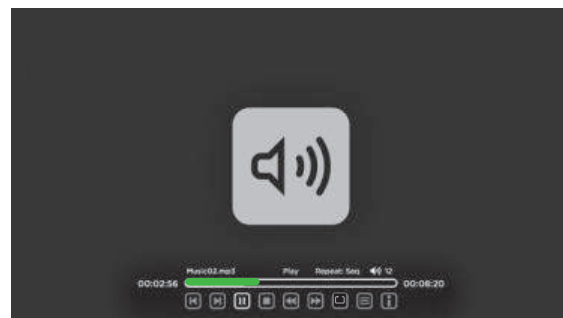


- After entering the audio file, use the **Arrow** buttons to select the desired music, then press the **▶||** to display. When the music is playing, the music Function Bar will be displayed. Use the **Arrow** buttons to select the desired function available on the bar.

## Watching Videos

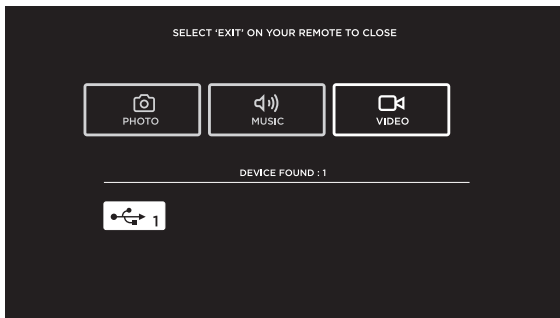 

  
- Use the **Arrow** buttons to highlight the **VIDEOS** option and press **OK**, then it will jump to confirm the inserted drive, press **OK** to enter. After entering **VIDEOS**, use the **Arrow** buttons to select the video file and press **OK** to enter.

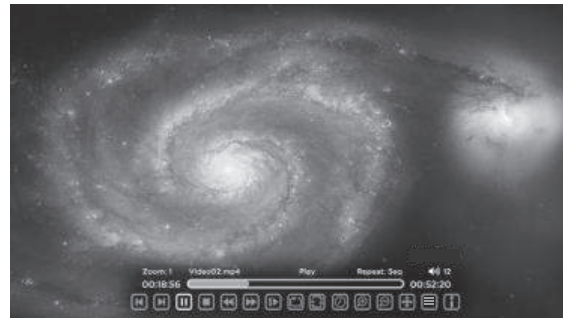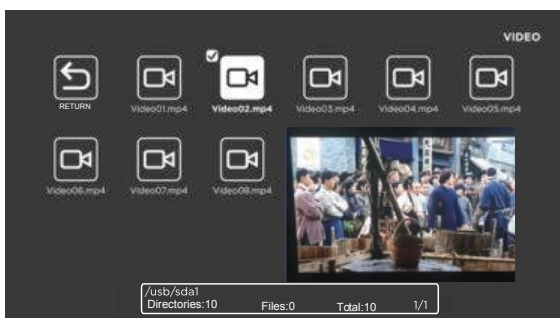

- After entering the video file, use the **Arrow** buttons to select the desire video, then press the **▶||** to display. When the video is playing, the video function bar will be displayed. Use the **Arrow** buttons to select the desired function available on the bar.

# Customizing TV Settings
 
## TV Settings

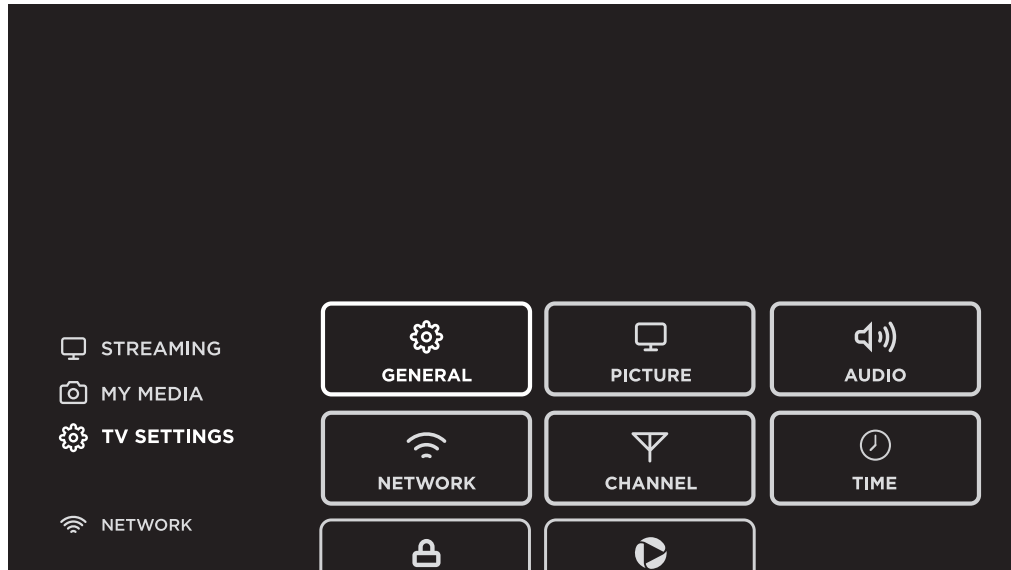


- Press the **MENU** button on the main unit or on the remote control to display the main interface. Then use the **Arrow** buttons to highlight **TV Settings** and press **OK** to enter. Then use the **Arrow** buttons to cycle among the following options and select the desired one to enter.



# Customizing TV Settings

 
## General

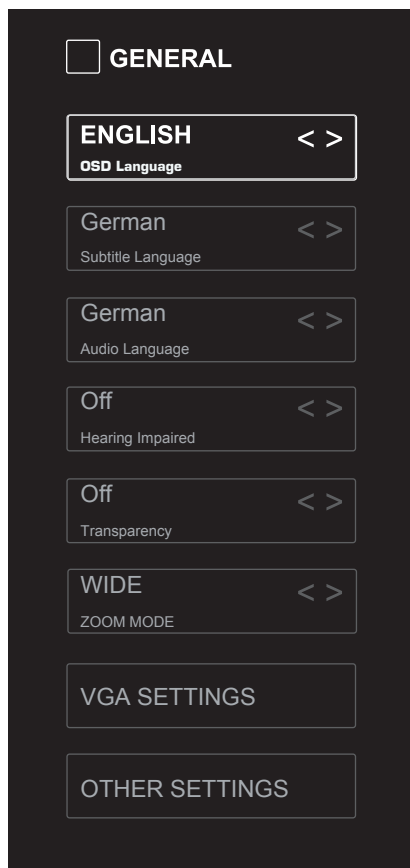

- Press **MENU** to display the main interface, then use the **Arrow** buttons to highlight **TV Settings** and press **OK** to confirm. Use the **Arrow** buttons to cycle among different options and select **General** to enter and adjust each option setting.

<b>OSD Language</b>	Select the OSD language among English, Français or Español. The default on-screen menu language is English.
<b>Subtitle Language</b>	Select the Subtitle language among English, Français or Español.
<b>Audio Language</b>	Select the language supported by the chosen digital channel.
<b>Hearing Impaired</b>	This function offers a subtitle such as a “stroke on the door” or “the bell starts to ring” for the current scene in case that the user is weak in hearing.
<b>TRANS ARENCY</b>	Select to turn On/Off transparency function.
<b>ZOOM MODE</b>	Select zoom mode: Wide/Wide Zoom/Zoom/Standard/Just Scan(at HDMI mode)/Dot by Dot(at VGA mode). Note: With a different input source, the zoom mode options may differ.
<b>VGA SETTINGS</b>	Adjust advanced option’s setting: H-POS, V-POS, Clock, Phase or Auto. (only available in VGA mode)
<b>OTHER SETTINGS</b>	HDMI: Mode1/Mode2. INLINK: LINLINK CONTROL,DEVICE POWER OFF,TV Auto Power On,AUDIO RECEIVER,LINLINK DEVICE LIST,ROOT MENU. Accessibility TTS: Voice Guide,VERBOSITY,RATE SUPPORT,PITCH SUPPORT,VOICE,Video Description DLC: Select to turn On/Off DLC.

# Customizing TV Settings

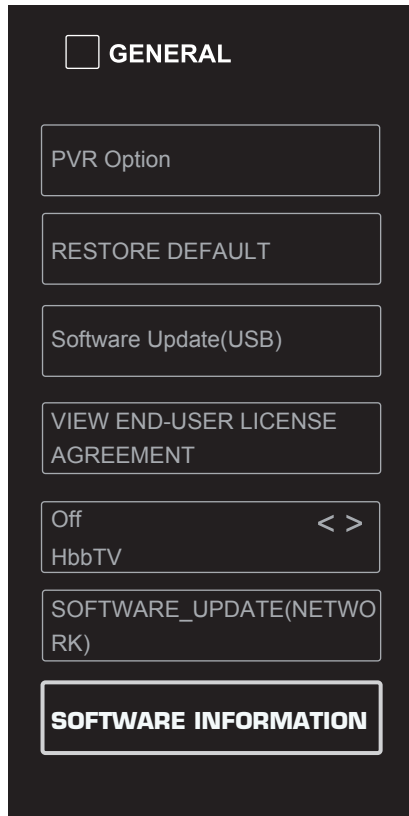 


<b>PVR Option</b>	PVR involved menus, Recording flow, Recorders playback, Recording restrictions.
<b>RESTORE DEFAULT</b>	Restore the TV to factory default settings.
<b>SOFTWARE UPDATE (USB)</b>	Software Update In the case of a USB device.
<b>VIEW END-USER LICENSE AGREEMENT</b>	Choose "I have read the user agreement" to select Accept or Decline .
<b>HbbTV</b>	Hybrid Broadcast Broadband TV.
<b>SOFTWARE UPDATE (NETWORK)</b>	Software Update In the case of a NETWORK device.
<b>SOFTWARE INFORMATION</b>	Check Module Software Version NetReady Device ID.

How to turn the Text-to-Speech (TTS) voice guide on or off?

- Press "MENU" key on the remote control
- Turn the GENERAL menu.
- Select "OTHER SETTING"
- Select "Accessibility"
- Select "Voice Guide" and turn it on or off.

# Customizing TV Settings
 
## Picture Settings

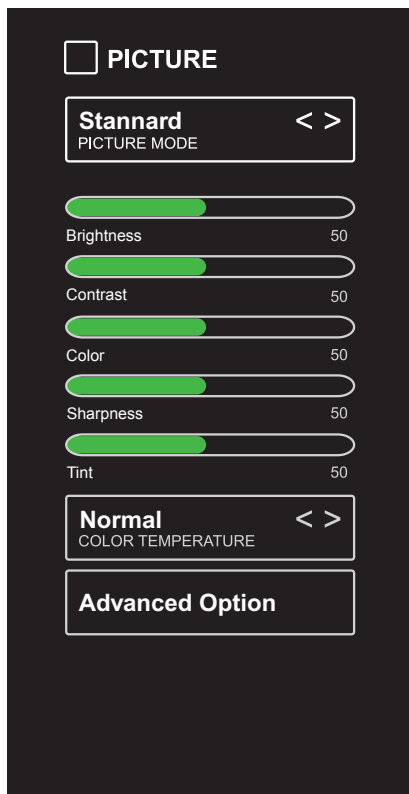


- Press **MENU** to display the main interface, then use the **Arrow** buttons to highlight **TV Settings** and press **OK** to confirm. Use the **Arrow** buttons to cycle among different options and select **Picture** to enter and adjust each option setting.

<b>Picture Mode</b>	Cycle among picture modes: Dynamic/Standard/Movie/User. Alternative: Press P.MODE button on remote control to set the picture mode directly.
<b>Brightness</b>	Increase or decrease the amount of white in the picture.
<b>Contrast</b>	Adjust the difference between light and dark levels in the pictures.
<b>Color</b>	Control the color intensity.
<b>Sharpness</b>	Adjust crispness level in edges between light and dark areas of the picture.
<b>Tint</b>	Adjust the balance between red and green levels.
<b>COLOR TEMPERATURE</b>	Cycle among color temperatures: Normal/Warm/COOL.
<b>Advanced Option</b>	Set the following options: Noise Reduction: Reduce the noise level of the connected device: OFF/WEAK/MEDIUM/STRONG. White Balance: To set the different options of white balance. R-GAIN/G-GAIN/B-GAIN/R-OFFSET/G-OFFSET/B-OFFSET. Backlight: To set the value of backlight.

# Customizing TV Settings

 
## Audio Settings

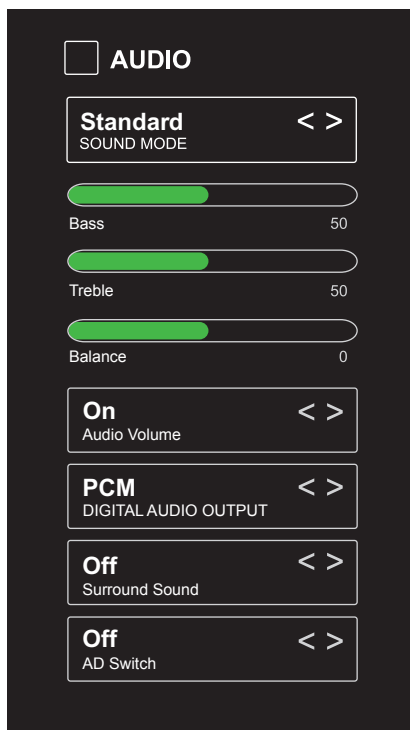

- Press **MENU** to display the main interface, then use the **Arrow** buttons to highlight **TV Settings** and press **OK** to confirm. Use the **Arrow** buttons to cycle among different options and select **Audio** to enter and adjust each option setting.

<b>SOUND MODE</b>	Allow the selection of an audio-enhancement technique: Standard/Music/Movie/User.
<b>Bass</b>	Control the relative intensity of lower-pitched sounds.
<b>Treble</b>	Control the relative intensity of higher-pitched sounds.
<b>Balance</b>	Adjust the relative volume of the speaker in a multiple speaker system.
<b>Audio Volume</b>	Turn On/Off to automatically control volume levels.
<b>DIGITAL AUDIO OUTPUT</b>	Select the digital audio output mode between PCM/RAW.
<b>Surround Sound</b>	Turn On/Off to provide an enhanced listening experience.
<b>AD Switch</b>	Turn On/Off to advertising Switch.


## Network Settings

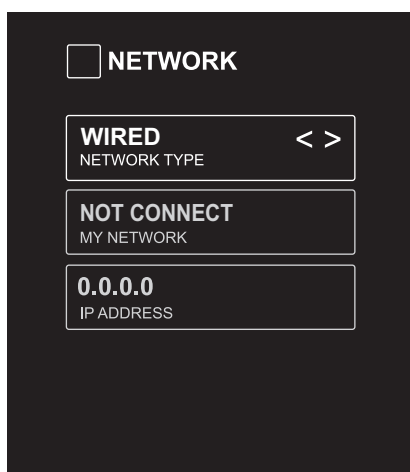 

- Press **MENU** to display the main interface, use the **Arrow** buttons to highlight **TV SETTINGS** and press **OK** to confirm. Then Use the **Arrow** buttons to select **NETWORK** to enter and adjust each option setting.

<b>NETWORK TYPE</b>	Select Wired and Wireless network, then connect the TV to the wired network or search the wireless network through searching available Wifi.
<b>MY NETWORK</b>	Display the current network which you connect to.
<b>IP ADDRESS</b>	Display the current IP information.

## Channel Settings

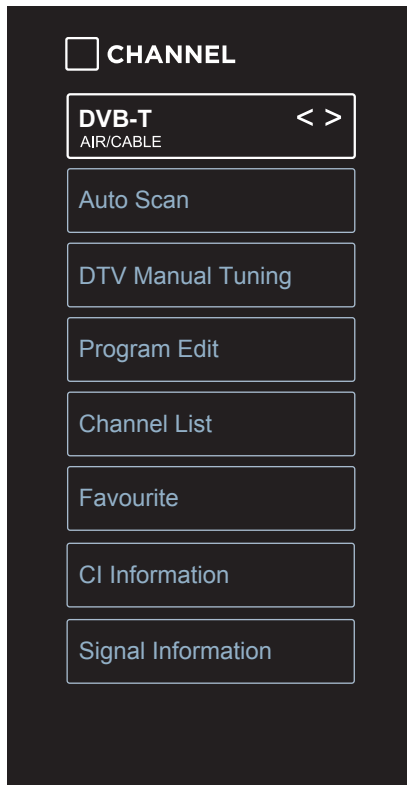 


- Press **MENU** to display the main interface, then use the **Arrow** buttons to highlight **TV Settings**. Use the **Arrow** buttons to cycle among different options and select **Channel** to enter and adjust each option setting.

<b>AIR/CABLE</b>	Select antenna between Air and Cable.
<b>Auto Scan</b>	Select the Auto Scan feature to scan your available Air and cable channels.
<b>DTV Manual Tuning</b>	Press the Left/Right arrow buttons to select the channel you wish to tune, then press OK button to scan for the channel.
<b>Program Edit</b>	Use up/down keys to select program edit. Press OK or Right button to enter the menu. Use up/down buttons to navigate through the menu.
<b>Channel List</b>	Display the current channel list.
<b>Favourite</b>	Set the selected channel as a favorite channel.
<b>CI Information</b>	When insert CI Module, display CI Information.
<b>Signal Information</b>	Display the information of current signal.

# Customizing TV Settings
 
## Time Settings

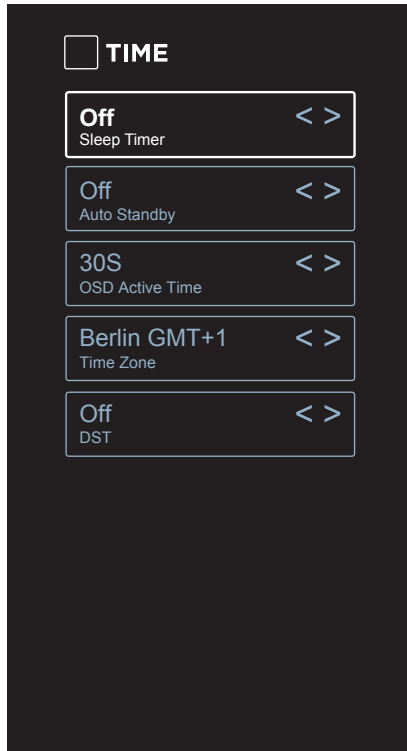


- Press MENU to display the main interface, then use the **Arrow** buttons to highlight **TV Settings** and press **OK** to confirm. Use the **Arrow** buttons to cycle among different options and select **Time** to enter and adjust each option setting.

<b>Sleep Timer</b>	Select a period of time after which the TV automatically switches to standby mode: Off/5/10/.../180/240 min. Alternative: You may press the SLEEP button repeatedly to select the number of minutes directly.
<b>Auto Standby</b>	Turn On/Off to Auto Standby.
<b>OSD Active Time</b>	Set the OSD Active time: Off/15s/30s/60s/120s/240s.
<b>Time Zone</b>	Select a Time Zone: PACIFIC/ALASKA/HAWAII/ NEWFOUNDLAND/ATLANTIC/ EASTERN/CENTRAL/MOUNTAIN.
<b>DST</b>	Turn On/Off to Daylight saving time.

# Customizing TV Settings
 
## Lock Settings

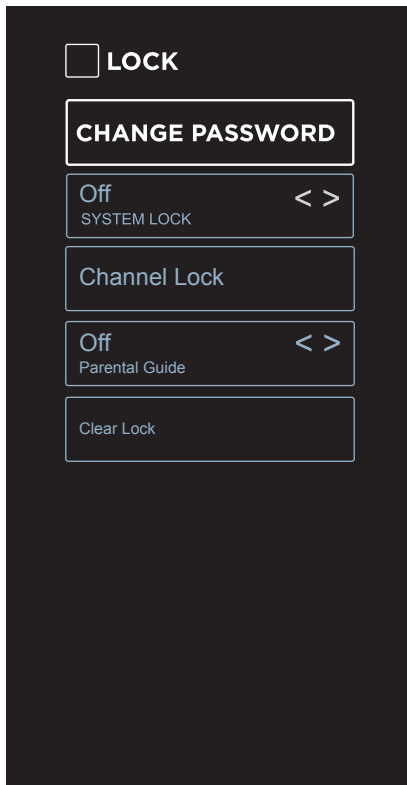


- Press **MENU** to display the main interface, then use the **Arrow** buttons to highlight **TV Settings**. Use the **Arrow** buttons to cycle among different options and select **Lock** to enter and adjust each option setting.

*Note: the default password is "0000".*

<b>CHANGE PASSWORD</b>	Use <b>0-9</b> buttons to input the old password and then input the new 4-digit password. Re-enter new password for confirmation.
<b>SYSTEM LOCK</b>	Select to turn On/Off system lock. The following options (USA, Canada, RRT Setting and Reset RRT) will only be accessible when you turn the system lock on.
<b>Channel Lock</b>	You can use the channel lock to lock selected channels.
<b>Parental Guide</b>	Select to turn On/Off Parental Guide. Parental Guide blocks programmes according to their parental level. This feature is available only for digital tv and tuned-in channel must support it.
<b>Clear Lock</b>	Clear all lock settings.

# Customizing TV Settings
 
## APP Settings

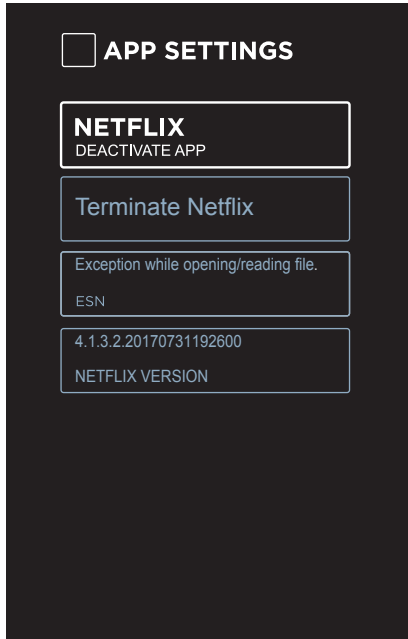

- Press **MENU** to display the main interface, then use **Arrows** to highlight **TV Settings**. Use **Arrows** to cycle among different options and select **App Settings** to enter and adjust each option setting.

<b>DEACTIVATE APP</b>	Deactivate Netflix and clear the account information.
<b>Terminate Netflix</b>	Select this option to close Netflix when you don't use the video rental service.
<b>ESN</b>	Electronic Serial Number.
<b>NETFLIX VERSION</b>	Show Netflix Version



# Customizing TV Settings

## Motion Picture Association of America (MPAA) Rating System

	Grade	Meaning
<b>G</b>	General Audiences	Content not offensive to most viewers.
<b>PG</b>	Parental Guidance Suggested	Content is such that parents may not want their children to view the program.
<b>PG-13</b>	Parents Strongly Cautioned	Program is inappropriate for pre-teens, with a greater degree of offensive material suggested than a PG rated program.
<b>R</b>	Restricted	Not for children under 17, strong element of sex and/or violence.
<b>NC-17</b>	No children under age 17	Not for children under 17 under any circumstances. Strong sexual content.
<b>X</b>	Hard Core Films	Same as NC-17 rating.
<b>No Rating</b>	No Rating	MPAA Not Rated

## TV Parental Guideline Rating System

	Grade	Meaning
<b>TV-Y</b>	All Children	Content not offensive to most viewers.
<b>TV-Y7</b>	Directed to Older Children	Considered suitable for children over 7, may contain fantasy violence scenes.
<b>TV-G</b>	General Audience	Considered suitable for all audience; children may watch unattended.
<b>TV-PG</b>	Parental Guidance Suggested	Suggested unsuitable for younger children, may contain suggestive language, bad language, sex and violence scenes.
<b>TV-14</b>	Parents Strongly Cautioned	unsuitable for children under 14, may contain strong language, bad language, sex and violence scenes.
<b>TV-MA</b>	Mature Audience Only	Adults only, may contain strong language, bad language, sex and violence scenes.

### Canadian Rating:

- Canadian English is used throughout all English-speaking Canada (C, C8+,G, PG,14+, 18+).
- Canadian French is used in Quebec (G,8 ans+, 13 ans+,16 ans+, 18 ans+).



The V-Chip will automatically block certain categories that are "more restrictive".If you block TV-Y category,then TV-Y7 will be automatically blocked. Similarly,if you block TV-G category, then allthe categories in the "young adult" will be blocked (TV-G, TV-PG,TV-14,and TV-MA).

# DENVER®

[www.denver-electronics.com](http://www.denver-electronics.com)



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Please enter: [www.denver-electronics.com](http://www.denver-electronics.com) and then click the search ICON on topline of website.

Write modelnumber:LDS-5070.

Now enter product page, and red directive is found under downloads/other downloads.

Operating Frequency Range: 42MHz ~ 862MHz.

Max Output Power: 135W

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

[www.facebook.com/denverelectronics](https://www.facebook.com/denverelectronics)



**DENVER**

LDS-5070



ENERGIA · ЕНЕРГИЯ  
ΕΝΕΡΓΕΙΑ · ENERGIJA  
ENERGY · ENERGIE  
ENERGI

**90**  
Watt

**132**  
kWh/annum

**127,5**  
cm  **50**  
inch

2010/1062 - 2017

