

# DENVER<sup>®</sup>

---

 
## Instruction manual

**BLUETOOTH SPEAKER TSP-306NR**



[www.facebook.com/denverelectronics](https://www.facebook.com/denverelectronics)

## FUNCTIONS

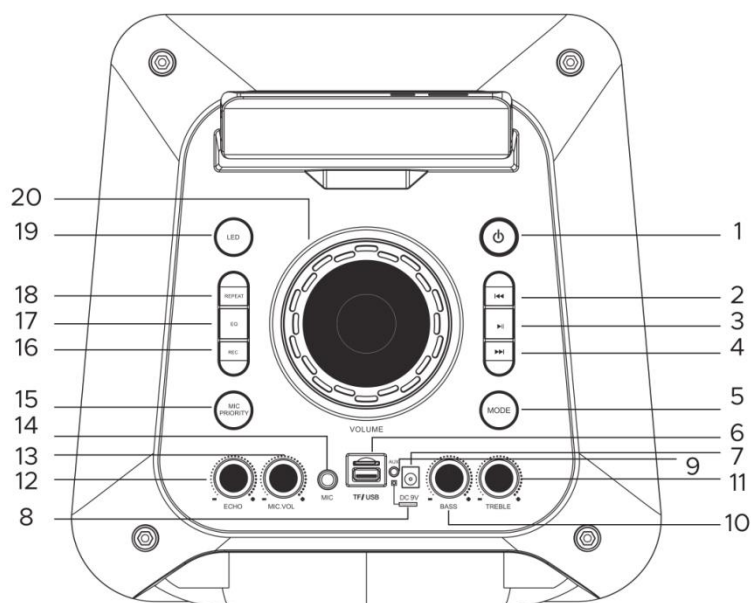

### 1. POWER

Turn speaker on/off.

### 2. PREVIOUS TRACK/VOL-

Press to select the previous track for playback. Press and hold for 3 seconds to reduce the volume.

### 3. PLAY/PAUSE

Press to toggle between pause and playback.

### 4. NEXT TRACK/VOL+

Press to select the next track for playback. Press and hold for 3 seconds to increase the volume.

### 5. MP3/AUX/BT-MODE

Press to toggle between MP3 player, Aux in and Bluetooth.

### 6. USB/microSD PORT

Connect your USB/microSD card to playback music in MP3 format.

### 7. DC 9V input

Charge with the specified adapter 9V, 1.5A, otherwise the speaker may be damaged.

### 8. Charging indicator

When the battery is low, the charging indicator lights up red. When the battery is fully charged, the charging indicator lights up blue.

## 9. AUX IN

3.5mm input jack for connecting line level devices (e.g. CD/MP3/DVD player, hi-fi system, PC).

## 10. BASS

Adjust the overall bass level.

## 11. TREBLE

Adjust the overall treble level.

## 12. ECHO CONTROL

Adjust the intensity of the echo effect.

## 13. MIC VOLUME

Adjust the microphone volume.

## 14. MIC IN

6.3mm 1/4" input jack for microphone.

## 15. MIC PRIORITY

Press to automatically reduce the music volume when using the microphone.

## 16. RECORD

Press to record via USB/microSD port.

**17. EQ:** Press to select EQ mode as Pop, Rock, Jazz, Classic, Normal for USB/microSD.

 
**18. REPEAT:** Press to repeat tracks.

**19. LED light switch:** Turn LED light on/off.

**20. Volume:** Adjust the overall volume level.

## REMOTE CONTROL KEYS AND FUNCTIONS

1. **POWER:** Turn speaker on/off.
2. **NUMERICAL KEYS:** Press to select tracks on USB/microSD.
3. **EQ:** Press to select EQ mode as Pop, Rock, Jazz, Classic, Normal for USB/microSD.
4. **Repeat:** Press to repeat single track or all tracks. Press once to repeat single track, press twice to repeat all tracks, press three times to exit repeat mode and return to normal playback.

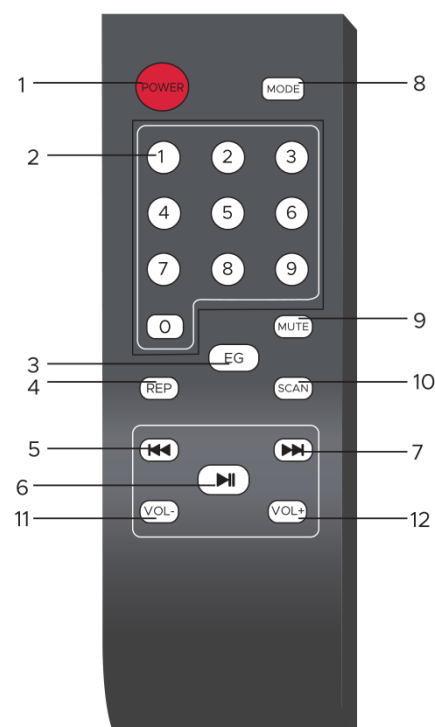

5. ⏮ Press to select the previous track for playback in USB/microSD/BT mode.
6. ⏪ The key to stop/play in USB/TF/BT.
7. ⏩ Press to select the next track for playback in USB/microSD/BT mode.
8. MODE: Press once to cycle through connected devices (BLUETOOTH – USB – microSD – FM).
9. MUTE: Press to mute/unmute the sound.
10. VOL-: Press to reduce the volume.
11. VOL+: Press to increase the volume.

## **PACKAGING CONTENTS**

- \* 1x main unit
- \* 1x User Manual
- \* 1x Remote Control
- \* 1x Charging Adapter
- \* 1x Wired Microphone

## **SPECIFICATION**

- \* Bluetooth Version: 5.0
- \* Battery Capacity: 7.4 V 1800 mAh lithium Battery
- \* Battery Type: Lithium Battery
- \* Power Supply: DC 9 V/1.5 A input
- \* Speaker Output Power: 20W
- \* Impedance: 4 ohm
- \* Frequency Response: 40 Hz-20 KHz

## **Adaptor Information**

Manufacturer's name or trade mark, commercial registration number and address:

Dong Guan JFEC Electronic Technical Product Inc.

9144190069476483X1

No. 18. Minye Street. No. 178 Industrial Zone. Tangxia Town. Dongguan City. Guangdong Province. P. R. China

Model identifier: JF012WR-0900130VH

Input voltage: 100 – 240 VAC

Input AC frequency: 50/60 HZ

Output voltage: 9 V

Output current: 1.3 A

Output power: 11.7 W

Average active efficiency: 82.83%

Efficiency at low load (10%): 75%

No-load power consumption: <0.1 W

Please notice-All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER®

[www.denver-electronics.com](http://www.denver-electronics.com)



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type TSP-306NR is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.denver-electronics.com](http://www.denver-electronics.com) and then click the search ICON on topline of website. Write model number: TSP-306NR. Now enter product page, and RED directive is found under downloads/other downloads

Operating Frequency Range: 2402 ~ 2480 MHz

Max Output Power: 43 dBm

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

[www.facebook.com/denverelectronics](http://www.facebook.com/denverelectronics)