
DENVER®

SMART TV with DVB-T2/S2/DVB-C and H.265/HEVC Support

Model: LDS-5575

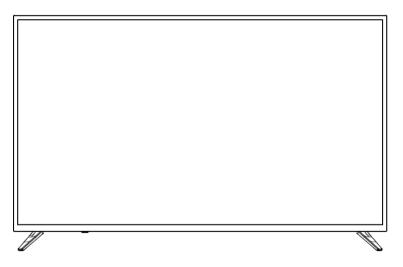

Quick start guide

The full user manual can be found by searching for this model number at <u>www.denver-electronics.com.</u>

IMPORTANT SAFETY INSTRUCTIONS-READ CAREFULLY BEFORE USE. Take note of the following safety information which appears on the back of the TV.



CAUTION: TO PREVENT ELECTRICAL SHOCK, DO NOT REMOVE ANY SCREWS AND COVERING, NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This symbol indicates the important information in the accompanied operating instructions. Always read this information carefully.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

Read and keep these instructions.

- Do not use this product near water.
- Clean the product only with a slightly damp cloth.
- Do not block any ventilation openings on the product.
- Install this product in accordance with the supplied Quick Start Guide and the User Guide.
- Protect the power cable from being walked on or pinched, particularly at plugs and the point where it exits from the TV.
- Do not allow the power cable to overhang the edge of a table.
- Unplug the product during lightning storms or when unused for a long period of time.



WARNING! TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS TV TO RAIN OR MOISTURE. THE TV MUST NOT BE EXPOSED TO DRIPPING AND SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED NEAR THE TV.

NOTE: No naked flames such as candles should be placed near the TV.

Smell/odor from TV


New televisions may emit an unusual smell or odor when first turned on.

Due to the manufacturing process of components, televisions and other electronic products can have parts that may emit a smell after the product is first turned on and warms up.

The smell will usually dissipate within a few days of use and does not return.

This is normal and occurs with many electronic products. Please ensure there is sufficient ventilation around the TV and in the room and the odor will dissipate.

Front View

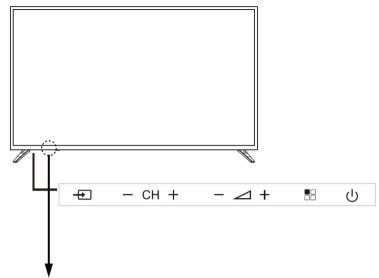

LED indicator/Remote Control window (keep clear of obstructions)

Button assignments

()(standby): Switch the TV on or to standby.


- (source): Press to select a source.

[] (menu): Press to display the OSD menu; press again to exit the menu.

CH+/CH-: Press to scan through channels; move down/up in the OSD menu screen.

 \checkmark +/ \checkmark - (volume up or down): Press to adjust the volume; move left/right in the OSD menu screen; the \checkmark + (volume up) button can be used to skip to a next menu.

Connections

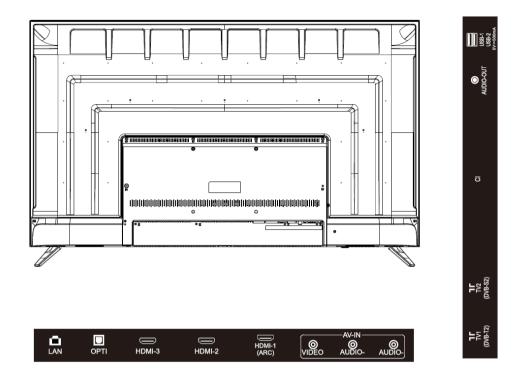

LAN (RJ45) port: Connect a RJ45 plug to an external modem or network access equipment. **HDMI port:** Connect a DVD/Blu-ray player or other HDMI device

TV1 (S2) jack: Connect a satellite signal.

TV2 (T2/C) jack: Connect to an aerial socket on the wall with the RF coaxial cable.

OPTICAL jack: Connect to an external digital audio device.

CI (Common Interface): CI slot.

AV jacks: Connect to the audio & video output terminals of a DVD player.

USB port: Connect to USB device for multimedia

AUDIO-OUT jack: connect to an external audio device.

Installation of TV channels

This TV comes with a triple digital tuner:

- used for digital terrestrial TV: DVB-T2 H.265 HEVC;
- used for digital cable TV: DVB-C;
- used for digital satellite TV: DVB-S2.

The TV also has an analogue tuner.

When you start the TV for the first time, first time setup will appear. You can select a language and country by using the left/right arrow buttons.

After making the settings, press the OK button. The auto tuning menu screen appears.

LANGUAGE SETTINGS Confirm your language setting		
Deutsch		
✓ English		
ЕѕрайоІ		
Français		
Polski		
Português		
Русский		


Select a tuning mode: DTV (digital TV), ATV (analogue TV) or both.

Then select a digital tuning mode: DVB-T for terrestrial (if you have own antenna on the roof), DVB-C (if you have digital cable TV, and you need to know the DVB-C information from your cable provider) or DVB-S (if you have a satellite dish).

If selecting DVB-T, you can just make an auto scan, and it will scan all available channels.

If selecting DVB-C, you can use either full scan or network scan (some countries demand this), and input Network ID, Frequency, Symbol rate and LCN on/ off.


If selecting DVB-S, you have to know what satellite your dish is pointing towards, and select this option in the setup menu.

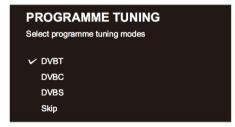

The TV has a common interface+ input. This allows you to insert a CA module from your TV/cable provider to watch pay-to-view channels and selectable channels outside of your package.

Read the instructions shown on the back of the TV on how to insert a CA module.



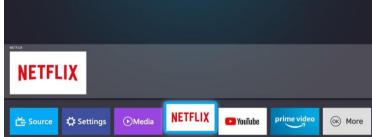

Press for button on the remote control to display the home menu. Use the arrow buttons to select an item or app on the home menu then press **OK**. You may also press the hotkey on the remote control to access the desired app directly.

Network Settings


GET CONNECTED
Connect your SmartTV to the internet to enjoy great services like Netflix to watch TV shows and movies.
✓ Wired
Wifi
Skip

Select wired, wifi or skip this step.

Attaching the stand

The pictures below are only for reference.


1. The supplied accessories for attaching the stand to the TV

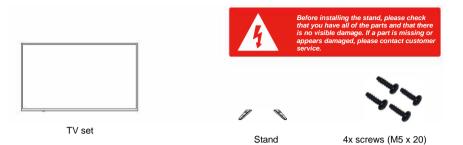

2. How to install the stand?

Place the TV face down on a soft and flat surface (e.g. blanket, foam, cloth, etc.) to prevent any damage to the TV.

Attach the stand to the bottom of the TV as shown below.

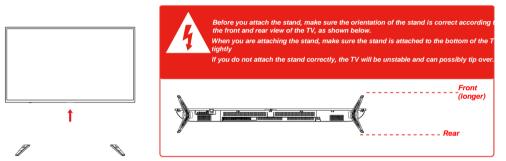

Secure the stand with the supplied screws.




3. Warnings.

a. Do not tilt the stand forward or backward as shown below. Doing so may damage the stand.



When attaching the stand, make sure the screws are attached tightly. If the screws do not attach tightly, it will lead the TV to be unstable or may even tip over.

b. Do not tilt the stand leftward or rightward as shown below. Doing so may damage the stand.

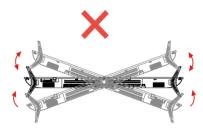



Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COP YRJGHT DENVER ELECTRON ICS A/S



www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Please enter: <u>www.denver-electronics.com</u> and then click the search ICON on topline of website.

Write model number: LDS-5575.

Now enter product page, and red directive is found under downloads/other downloads. Operating Frequency Range: 177MHz ~ 803MHz. Max Output Power: 155W

DENVER ELECTRONICS A/S Omega 5A, Soeflen DK-8382 Hinnerup Denmark www.facebook.com/denverelectronics