## Soundbar User Manual DENVER DSB-4020

 
# Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.


- 1. This product is not a toy. Keep it out of reach of children.
- Keep product out of the reach of children and pets to avoid chewing and swallowing.
- Product operating and storage temperature is from 0 degree Celsius to 40 degrees Celsius. Under and over this temperature might affect the function.
- Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
- 5. Do not expose to heat, water, moisture, direct sunlight!
- Please protect your ears against loud volume. Loud volume can damage your ears and risk in hearing loss.
- Bluetooth wireless technology operates within a range of about 10 m (30 feet). The maximum communication distance may vary depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.
- 8. Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices.
- The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
- Only charge with supplied Adaptor. The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable. So, make sure there is space around the power outlet for easy access.
- 11. Do not use non original accessories together with the product as this can make the product functionality abnormal.

#### What's in the Box?

|  |         |         | So      | und bar |        |           | _   |           |   |
|--|---------|---------|---------|---------|--------|-----------|-----|-----------|---|
| Remote Control   | Screws  | Power S | upplies | )<br>'  | Aux (  | Cable     | Use | er Manual |   |
| Connecting Your Sound Bar to Your TV or other sources:<br>Illustration of the Soundbar connectors for different connections: |         |         |         |         |        |           |     |           |   |
|  |         |         | -       |         |        | EN        |     | E         | Ν |
|  |         |         | 0       | $\odot$ | 0      | HDMI-A    | RC  | HDMI-ARC  |   |
|  |         |         |         |         |        | OPTICA    | L   | OPTICAL   |   |
| HDMI-ARC   | OPTICAL | USB     | LINE IN | DC IN   | SW OUT | LINE IN   |     | LINE IN   |   |
|  |         |         |         |         |        | DC IN     |     | DC IN     |   |
| 1a. Is an HDMI input jack on your TV labeled "ARC"?  |         |         |         |         |        | ptical ou |     |           |   |




 Use HDMI cable (V1.4 above) to connect the sound bar to the TV <u>ARC</u> socket.




Use Optical cable to connect the sound bar to the TV, DVD player or set top box.

 Ib. Don't have ARC or Optical output available on your TV?



Connecting the sound bar identified LINE IN to the TV with the provided AUX cable.

 NOTE: All cables what you needed should be plugged in before Power Supplies connected.



A red LED will pulse on the front of the sound bar indicating boot up.

o 💿

\_

### 3. Turn on your sound bar.

Placing the Soundbar on a flat and solid surface. Hold the Power button  $\textcircled$  /MODE at the right side of the sound bar or Press **RED** key on the remote control to turn it on. Selecting Mode (input source) as the following instruction to enjoy your powerful sound. When the Soundbar is switched to standby, the red dot is turned on. <u>NOTE</u>: 1. RESET: Hang up is solved by disconnecting and reconnected the power supplies.

2. It will be standby within 10 munities if no signal from Line In, BT, USB, ARC and Optical inputs. It also will be standby if the low sound from Line In need to be heard within about 15cm distance.

## The control panel on the Soundbar:



| Symbol     | Operation            |  |  |  |  |
|------------|----------------------|--|--|--|--|
| .,         | Hold                 | Press  |  |  |  |
| U /MODE    | Power On/<br>Standby | Toggle the Mode change: LINE IN $\rightarrow$<br>Bluetooth $\rightarrow$ USB Drive $\rightarrow$ ARC $\rightarrow$ Optical |  |  |  |
| MUTE /MUTE |                      | Pause/Play (USB/Bluetooth Mode)<br>Mute / No Mute  |  |  |  |
| VOL+ / 🍽   | Volume up            | Next USB Drive/Bluetooth Song  |  |  |  |
| V0L-/ 🛤    | Volume down          | Next USB Drive/Bluetooth Song.   |  |  |  |

## Remote control buttons



| ٩<br>٩     | Switch the product on or to standby  |  |  |
|------------|--|--|--|
| <b>段</b>   | Mute or restore volume   |  |  |
| EQ         | Equalizer: Eq0: Normal, Eq1: Rock, Eq2: Pop, Eq3: Classic,<br>Eq4: Jazz, Eq5: Country, Eq6: Music  |  |  |
| Ą          | Decrease volume  |  |  |
| 电          | Increase volume  |  |  |
| ¥          | Skip to previous audio file during USB/BT play   |  |  |
| M          | Pause or play USB/BT audio file  |  |  |
| ₩          | Skip to next audio file during USB/BT play   |  |  |
| tì         | Repeat audio during USB play   |  |  |
| MODE       | Select an audio source *   |  |  |
| *MODE (sou | rce) selection shown on the LED display.   |  |  |
| 1 108      | Line In source   |  |  |
| 65         | Bluetooth source<br>• Flashes if the Soundbar is not paired or connected to a<br>bluetooth device.<br>• Lights up if the Soundbar is paired. |  |  |
| USB        | USB source when connecting to a USB drive  |  |  |

HDMI-ARC source

Optical In source

8ac 095

### Importance Notice for soundbar mounting on the wall:

- Wall-mounted installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage! (If you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing, which may be hidden inside or behind the wall.)
- It is the installer's responsibility to verify and confirm that the wall will safely support the total load of the unit and wall brackets.
- 3) Additional tools (not included) are required for the installation.
- 4) Do not overtighten screws.
- 5) Use an electronic stud finder to check the wall type before drilling and mounting
- 6) The proposed height on the wall is 1.0~1.5meters
- 7) The strain relief (<23mm) of HDMI cable is recommended for more space during mounting.

### **Technical Specifications**

| Power consumption:<br>Max output power:<br>Bluetooth version:<br>Operating frequency range:<br>Soundbar measurement:<br>Bluetooth name: | 40W<br>45 W<br>5.1<br>2402-2480Mhz<br>80cm * 6cm<br>DSB-4020                       |
|---|--|
| Power Supplies Information:   |  |
| Manufacturer:   | SHENZHEN FIT-POWER TECHNOLOGY CO., LTD.  |
| Commercial registration number:   | 91440300577672653M   |
| Address:  | 201, NO.7 RIFU ROAD, EAST DISTRICT, BAISHIXIA COMMUNITY,<br>FUYONG. BAOAN SHENZHEN |
| Trade mark  | FIT-POWER  |
| Model:  | TP04-180200E   |
| Input voltage:  | 100-240V~  |
| Input AC frequency:   | 50/60Hz  |
| Output voltage:   | DC18V  |
| Output current:   | 2.0A   |
| Output power  | 36W  |
| Max output power:   | 54W  |
| Average active efficiency:  | 87%  |
| Efficiency at low load (10%):   | 82%  |
| No-load power consumption:  | 0.1W or less   |

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

### ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type DSB-4020 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.denver-electronics.com and then click the search ICON on topline of website. Write model number: DSB-4020. Now enter product page, and red directive is found under downloads/other downloads. Operating Frequency Range: 2402-2480Mhz Max Output Power: 40W

#### DENVER ELECTRONICS A/S

Omega 5A, Soeften DK-8382 Hinnerup Denmark www.facebook.com/denverelectronics