



LBP-317

denver.eu
Manual

2022



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

SAFETY INFORMATION

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. Keep product out of the reach of children and pets.
2. Make sure the power switch controlling is turned off before installing or uninstalling.
3. The use of the product is intended for indoor and dry conditions.
4. Handle the product carefully. The product is fragile. It can break easily if dropped to the floor.
5. Never open the product. Repairs or service should only be performed by qualified personnel. Touching the inside electrics can cause electric shock if connected to power.
6. When the bulb is turned on, it will become hot as light is emitted. To avoid burning your hands, do not touch the bulb immediately after turning off the power.
7. Please protect your eyes and do not look directly into the lightning prism when product is operating.

Before assembly or use, read the following instructions carefully to avoid safety hazards, malfunction or damage. If in any doubt consult a qualified electrician.

The mentioned voltage of AC 230V should comply with the voltage of your electricity system. If this is not the case do not connect the bulb.

Assembly of the Bulb

Caution: Make sure that the electricity is turned off at the power source before commencing the installation

1. Unpack the disco bulb from packaging and put the box on a suitable surface.
2. Screw the bulb (E27 max. 3W) into the lamp holder.
3. Connect the plug into the mains supply. Switch on/off the disco bulb with on-off switch.

Maintenance and Care

1. To avoid the risk of electric shock and burn, please turn off the power supply and wait for the bulb to cool down when installing, removing or cleaning.

2. To avoid electric shocks never uncover the on-off switch or try to insert objects into it.
3. Avoid direct contact of the bulb with water.
4. Always carry the bulb by holding the plastic area.
5. If necessary, the bulb can be cleaned with a clean dry or slightly damp cloth.
Caution: please switch it off before cleaning.
6. The disco bulb should be placed on a dry and clean surface.
7. The lamp is designed for indoor use only.
8. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

Please notice - All products are subject to change without any notice.

We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark
www.facebook.com/denver.eu

ENG 4