

denver



ACT-321

denver.eu

November/2022



FR

Cet appareil et
ses accessoires
sont recyclables

À DÉPOSER
EN MAGASIN



OU

À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

- 1.Warning: This product includes lithium ion battery.
- 2.Keep product out of the reach of children and pets to avoid chewing and swallowing.
- 3.Product operating temperature is from 0 degree Celsius to 45 degree Celsius and storage temperature is from -30 degree Celsius to 65 degree Celsius. Under and over this temperature might affect the function.
- 4.Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
- 5.Do not expose to heat, water, moisture, direct sunlight!
- 6.The unit is not waterproof unless using the transparent waterproof casing. Casing is water proof to 30 meters.
- 7.If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
- 8.Only charge with supplied USB cable.
- 9.Do not use non original accessories together with the product as this can make the product functionality abnormal.

Introduction to appearance and keys ▾





Start using ▼

1. Charge the built-in lithium battery

Connect the camera to the computer for charging, at this time, the charging indicator will be in red, and it will be off after charging. Generally, it takes 2-4 hours to charge the battery.

2. Use the storage card

2.1. Push the Micro SD card into the slot till it is in place as per the instruction in concavely engraved words by the storage card slot.

2.2. To take out the Micro SD card, press the tail of the storage card inwardly softly and it will be popped out.

Please notice: Some UHS (ultra high-speed) cards do not work, as they are not 100% backward compatible

Note: There's no built-in memory unit in the camera, so make sure to insert a storage card into it prior to use (it is recommended that a Micro SD card of better quality be used).

3. Power on/off

3.1 Power on: Press Power key for 3 seconds, the screen will be on and the camera will be started.



3.2. Power off: Press Power key for 3 seconds when the camera is in the idle state to turn it off.

3.3. Power off when the camera is lack of electricity. When electrical quantity of the battery is very low, an icon of  will be displayed on the LCD screen, prompting you to charge it in time.

4. Video recording mode

After power is on, the camera will enter video recording mode directly and in preview mode, press Shutter key to start video recording; Press it again to stop shooting. If the memory card is full or electrical quantity is low, it will also stop shooting.

5. Taking photo

After power is on, press power key to enter shooting mode, and in preview state, press shutter key to take a photo.

Technical parameters ▼

LCD screen	2.0"LTPS
Lens	90° wide angle
Video resolution	1280*720p@30fps interpolated 640*480@30fp
Photo resolution	5M interpolated/3M interpolated/ 2M interpolated/1.3M/VGA,JPG
Storage	Micro SD (Max up to 32GB)
Frequency of Optical Source	50Hz / 60Hz
USB Interface	USB 2.0
Power supply	3.7V rechargeable lithium battery
Operating System (OS)	Windows XP/VistaorAbove/Win7/Mac os

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type ACT-321 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

www.denver.eu and then click the search ICON on topline of website. Write model number: ACT-321.

Now enter product page, and red directive is found under downloads/other downloads.

Operating Frequency Range: 50-60Hz

Max Output Power: 4.2V 350mAh

DENVER A/S
Omega 5A, Soefften
DK-8382 Hinnerup
Denmark
www.facebook.com/denver.eu

Warning!

- Lithium battery inside!
- Do not try to open the product!
- Do not expose to heat, water, moisture or direct sunlight!