

User Guide



FAS-1806

Denver.eu

12/2022



Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. Warning: This product includes lithium ion battery.
2. Keep product out of the reach of children and pets to avoid chewing and swallowing.
3. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
4. Never open the product. Touching the inside electricians can cause electric shock. Repairs or service should only be performed by qualified personnel.
5. Do not expose to heat, water, moisture, direct sunlight!
6. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
7. Only charge with supplied Adaptor. The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable. So, make sure there is space around the power outlet for easy access.
8. Do not use non original accessories together with the product as this can make the product functionality abnormal.

1 Overview



1. Enter sub menu 1. To select the Option that is shown at the bottom right of the screen and confirm a selection.
2. Answer or start a call button, In Standby: press to open Call History
3. Long press to call voicemail.
4. Star button. Lock or unlock keypad
5. Navigation button and Enter button.
6. Enter submenu 2. To select the Option that is shown at the bottom right of the screen
7. Press and hold for power on or off, press to end call, in menu press to exit.
8. Numeric and alphabetic buttons
9. HASH tag button. Press to toggle between upper and lowercase letters and digits. Long Press: Change Sound Profile
10. Press and hold button to turn Flashlight on or off

2. Setting up your phone

Remove the rear cover of the phone. Opening in bottom left corner. You can use your fingernail to lift off the cover.




Insert the SIM card(s) into the holder as illustrated below with the chip facing downwards. SIM cards are not included. SIM cards and contact point will be easily damaged to scratches and bending. Please be careful.


1. SIM 1: Nano SIM
2. SIM 2: Standard SIM



Optionally. Only needed for camera pictures/videos or other multimedia files.
Insert micro SD Card (Max 32GB) into the card slot as shown below with gold contacts facing down. Micro SD card is not included.

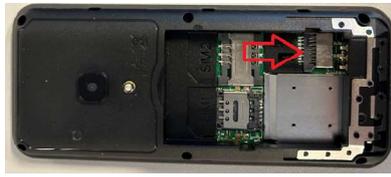


Insert the battery into to battery slot.

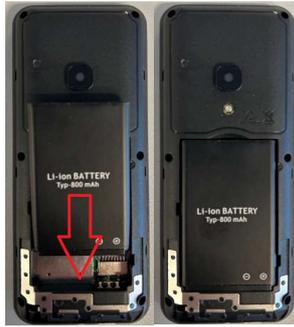

Put the rear cover on again. It says click when mounted.

Before you start using the phone please charge the battery with the included power adaptor in atleast 4 hours.

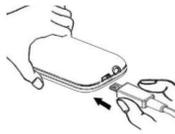

3. Managing 2 SIM cards and profiles

When making a call or sending a TEXT message you will be prompted to select the SIM profile that you want to use (SIM 1 or SIM 2). If you use different networks for each SIM card, the network name is displayed clearly SIM 1 or SIM 2 selection to make identification easy.

4. Icons on the display

-  Signal strength
-  Battery indicator
-  Missed call
-  New message
-  Silent (Mute) mode
-  Vibration mode
-  Outside mode
-  Home mode
-  Alarm Clock on
-  Call forwarding
-  Bluetooth

5. User menu



Phonebook



Here you can add and search your contacts.

This menu allows you to add a new record to the SIM card or the phone. Enter the phone number directly in standby mode, then press the Options button to save the phone number in the SIM card or the phone.

First you need to select the storage location: To SIM or To phone.

- **To SIM:** Select this option, press the OK button or press the left softkey [Options] to enter the name input menu and enter the corresponding name. Then press the OK button or the left softkey [Options] to select 'Done' and confirm.

Press the navigation buttons to switch to number column, enter the phone number directly and confirm, finally press the OK button or the left softkey [OK] and confirm to save. Adding records to the SIM card is done.

- **Send text message:** Send a text message to the currently recorded recipient.
- **Call:** Dial the currently selected phone number.
- **Edit:** Edit contact names and phone numbers.
- **Delete:** Delete the currently selected record.
- **Copy:** Copy the contact to mobile phone or SIM, memory card.
- **Add to Blacklist:** Add to the blacklist and remove from blacklist
- **Phonebook settings:** Here, the various submenus of the phone book are set.

Messages



Here you can write and send messages.

Function: Compose a new message, save and/or send it to the recipient.

Note: to send SMS, you need to set the correct SMS service center number which can be obtained from your network provider.

While composing, press the # button to change the input method. A text message can be up to 612 characters in length and may contain pictures and ring tones (EMS).

- Send to: To send the composed message, input the recipient's number using the keypad or select a contact from your Phonebook.
- Insert symbol: Insert special symbol
- Input method: Select other input method
- Insert template: Choose preset SMS.
- Advanced: You can also select the contact and then add their phone number
- Save: Save the message to drafts.

Note: 1. To send SMS, you need to set the correct SMS service center number which can be obtained from network provider.

If [SMS settings/Common settings/Save sent message] is [On], the successfully/unsuccessfully sent SMS will be both saved to Outbox; otherwise the SMS will not be saved.

Inbox

Received SMS messages can be stored either in the phone or in SIM memory, and accessed here.

When you have received a message, the tones or vibration (as defined in the menu [User profiles/profiles options/Customize/Tone setup/Message tone]) to alert you and the message icon will also be shown on the screen. Press the left softkey [View] or the OK button to read the new message, press the right softkey [Cancel] to return, to access the inbox to read the message.

If the message memory is full, "Memory full" and the message icon will flash on the display. Before you can receive new messages, delete some of your old messages in the inbox folder. If the capacity of new messages is beyond the capacity of the inbox, the information will be lost.

In the message list, press the OK button or the left softkey [Options] to enter the following menu:

- View: View information content.
- Reply: Reply to the SMS sender directly.
- Call sender: Call the message sender directly.
- Forward: Forward the message to someone else.
- Delete: Delete the message.
- Delete all: Delete all messages.
- Save to phonebook: Add to a new contact or existing contact
- Advanced: Other phone settings

Note: 1. To send SMS, you need to set the correct SMS service center number which can be obtained from network provider.

2. If [SMS settings/Common settings/Save sent message] is [On], the successfully/unsuccessfully sent SMS will be both saved to Outbox; otherwise the SMS will not be saved.

If [Save and send] option is selected when sending the message, the sent SMS will be saved to Outbox.

In the sent message list, press the OK button or the left softkey to read the selected message.

Sent message

If the message is sent successfully, the sent SMS will be saved to Outbox.

Multimedia



Camera

Take photos with the built in camera.

Video recorder

Record a video.

Audio player

Play MP3 files or Sound recordings. Only works if you have micro SD card inserted with MP3 files (not included)

Video Player

Playback video files from your camera.

Sound recorder

Make sound recordings.

Organizer



Bluetooth

Bluetooth connection for external BT headset or speaker (Both no included).

Alarm

Set an alarm.

Calendar

Add reminders in the calendar.

Calculator

Mini calculator function

World Clock

Check the clock for various places in the world.

Tasks

Create tasks.

Flashlight

Activate or deactivate flashlight.

Application



Auto call record

Here you can auto record calls. Requires microSD card (not included)

 
Blacklist

Here you can handle blacklisted numbers.

Fun & Games

Here you can access one game.

File manager



Currently available memory locations are shown in the file manager menu.

Call history



Here you can see missed calls/dialed calls/received calls/all calls/delete all logs/call timers

Settings



User profiles

Here you can choose different sound profiles.

Phone settings

Here you can set Time & Date, Language etc.

Dual SIM settings

Here you can check the SIM settings.

Security settings

Here you can manage the lock settings of the phone. Default password is: 1234

Restore Factory settings

This setting reset all the settings of the phone back to Factory setting.

FM radio



In the FM radio menu, press the left/right navigation buttons for forward/backward channel auto search, until a channel is found. Press the up/down navigation buttons to decrease/increase the frequency by 0.1 MHz. Use the */# button to adjust the volume. Press the OK button to pause FM playback.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type FAS-1806 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: FAS-1806. Now enter product page, and RED directive is found under downloads/other downloads.

Operating Frequency Range:
Bluetooth: 2402MHz-2480MHz
FM: 87.5-108MHz
EGSM(900): 890.2-914.8 MHz
DCS(1800): 1710.2-1784.8 MHz
Max Output Power: <8.32W

DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark
www.facebook.com/denver.eu