



# Instruction manual

## BLUETOOTH SPEAKER BTS-110

BLUETOOTH  
CONNECTION

RADIO FM SCAN

MP3 PLAYER

USB/MICRO SD  
CARD READER

AUX IN



<https://facebook.com/Denver.eu>



FR

Cet appareil et  
ses accessoires  
sont recyclables

À DÉPOSER  
EN MAGASIN



À DÉPOSER  
EN DÉCHÈTERIE



OU

Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !


## Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Warning: This product includes lithium polymer batteries.
3. Keep product out of the reach of children and pets to avoid chewing and swallowing.
4. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
5. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
6. Do not expose to heat, water, moisture, direct sunlight!
7. Please protect your ears against loud volume. Loud volume can damage your ears and risk in hearing loss.
8. Bluetooth wireless technology operates within a range of about 10 m (30 feet). The maximum communication distance may vary depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.
9. Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices.
10. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
11. Only charge with supplied USB cable.
12. Do not use non original accessories together with the product as this can make the product functionality abnormal.

## CONTROLS

1. Micro USB socket for charging with LED indicator:  
Red: Charging, turn off when charging is completed.
2. Micro SD memory input
3. USB input
4. AUX IN input
5. Volume-/Previous Track button
6. Volume +/Next track button
7. MODE button
8. Power On/Off/Play/Pause button

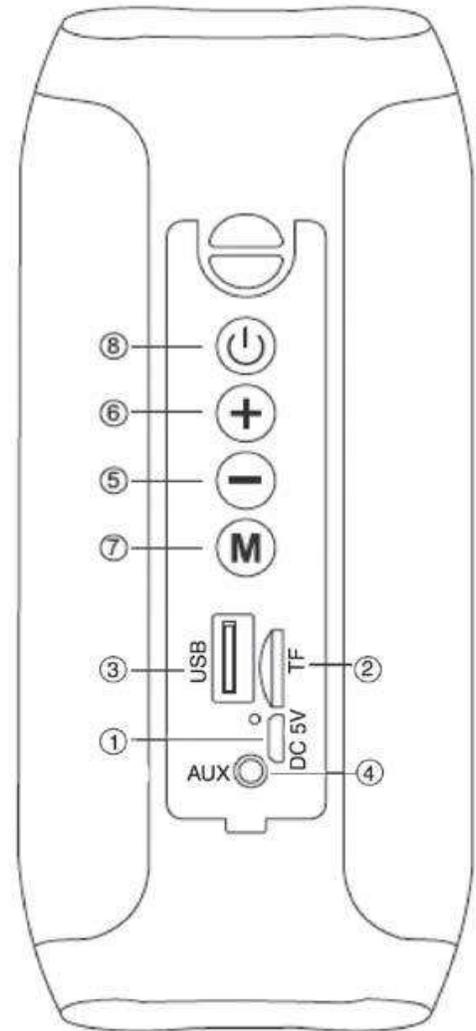

## CHARGING

The speaker must be recharged when switched off.

1. Using the supplied USB cable, connect the end with the Micro USB jack to the micro-USB jack (1) of the speaker and the other end to the USB port of a PC or USB charger (5V, 1A, not included).
2. The LED indicator will light up red to indicate the charging status of the speaker, when fully charge the speaker, the LED indicator will turn off.

## BASIC OPERATION

To turn on the speaker, press and hold the power button (8).

Press the MODE button (7) to choose from:

1. Bluetooth mode.
2. Micro SD mode, if a micro SD type memory card is inserted into the micro

- SD port (2), the speaker will start playback of the music automatically.
3. USB Mode, if a USB-type memory card is inserted into the USB port (3), the speaker will start playing songs automatically.
  4. Radio Mode.

## **VOLUME ADJUSTMENT**

Press and hold the Volume - (5), Volume + (6) to decrease or increase the volume.

## **AUX IN**

1. Turn on the speaker.
2. Connect the aux-in cable to the AUX IN jack (4) of the speaker and the other end to the external device.
3. Then you can start to play music from the external device.

## **USE MICRO SD CARD/USB CARD**

1. Turn on the speaker.
2. Insert a Micro SD card into the micro SD port (2) with holding the contacts facing the USB plug or insert a USB memory card into the USB port.
3. The music will be played automatically.
4. Press once the Volume-/Previous Track button (5) button to skip to the previous track; press the Volume +/Next track button (6) to move to the next track.
5. Press the button (8) to pause or resume the playback.

## **BLUETOOTH OPERATION**

### **PAIR THE DEVICES**

1. Place the speaker next to the Bluetooth device to be paired.
2. Turn on the speaker and press the MODE button (7) to enter the bluetooth mode.
3. Follow the instructions of your device to search the speaker.
4. The speaker name is "Denver BTS-110" and will be displayed on your Bluetooth device list, select it and enter the password of "0000" if required.
5. When paired successfully, you can stream music from your Bluetooth device to the speaker.

### **Notes:**

- The Bluetooth speaker only can connect to one Bluetooth device at a time,

and the connection cannot be interrupted during operation.

- When the Bluetooth pairing fails, delete another Bluetooth device in the list of connections, restart the Bluetooth speaker and search for the Bluetooth device to be connected again.

## **COMMANDS IN BLUETOOTH MODE**

1. Press once the Volume-/Previous Track button (5) button to skip to the previous track; press the Volume +/Next track button (6) to move to the next track.
2. Press the power button (8) to pause or resume the playback.
3. If you receive a call, press the power button (8) to answer the call and activate the speaker phone feature. To end the call, press the power button.

## **LISTEN TO RADIO**

***Before using the radio function, please insert the Micro USB cable into the USB port of the speaker (1) as a receiving antenna.***

- Press the MODE button (7) to select the radio function.
- Press and hold the MODE button (7), the speaker will start searching and storing radio stations automatically.
- Once you have registered stations, press the Volume +/Next track button (5) to select the previous station or the Volume +/Next track button (6) to select the next station.

## **TRUE WIRELESS STEREO BLUETOOTH CONNECTION (TWS FUNCTION FOR TWO SPEAKERS)**

1. Power on two speakers and the default setting is the Bluetooth mode, the LED light flash (a sound is heard confirming the speaker is set into Bluetooth pairing mode).
2. Turn off the bluetooth function on your phone or other bluetooth device , long press M button of either speaker and (a sound is heard confirming the TWS function opened ), after few seconds two bluetooth speakers voice prompt, when you see one of speaker LED light is flashing and another LED light is on but not flashing, it shows two speakers bluetooth connected;
3. Open the mobile phone Bluetooth - search the “Denver BTS-110”;
4. Find the name “Denver BTS-110” - select the connection;
5. Bluetooth speaker voice prompt, it show bluetooth connected, then you will enjoy the music from two speakers;
6. Long Press M button again if you want to quit the TWS function and enjoy

music by one speaker.

Note: If some equipment prompts for a password, enter the default password 0000.

## **VOICE ASSISTANCE FUNCTION**

Press the MODE button (7) for twice to turn on the mobile voice assistance function.

## **TECHNICAL FEATURES**

Rechargeable Battery: .....	Internal lithium: 3.7V, 1200mAh
Power: .....	5V 1A
FM frequency: .....	87.5~108.0MHz
Bluetooth Frequency Range: .....	2402MHz~2480MHz
Operating Frequency Range: .....	20Hz~20KHz
Max Output Power: .....	40dBm
Dimensions: .....	160 x 70 x 70 mm
Weight: .....	380 g

## **SAFTY, CLEANING & MAINTENANCE**

Important information regarding safety issues

Read this safety information carefully in order to avoid personal or device damage. Study the instruction manual carefully before you install and start up the device. The manufacturer cannot be held responsible for an incorrect installation and non-intended usage.

Risk of hearing loss

Never use the appliance with high volume for long periods, or may cause hearing loss.

Moisture and water

Never use the appliance in damp areas or near a sink, wash stand, bathtub, shower, etc.

Never touch the appliance with wet hands.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



<https://denver.eu>



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling

stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type BTS-110 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://denver.eu> and then click the search ICON on topline of website. Write model number: BTS-110. Now enter product page, and red directive is found under downloads/other downloads.

***Warning! Lithium battery inside***

Denver A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

<https://facebook.com/Denver.eu>