



NVI-491

denver.eu

2023



FR

Cet appareil,
ses accessoires
et ses batteries
sont recyclables

À DÉPOSER
EN MAGASIN



OU

À DÉPOSER
EN DÉCHÈTERIE





Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Warning: This product includes lithium ION battery.
3. Keep product out of the reach of children and pets to avoid chewing and swallowing.
4. Product operating and storage temperature is from -5 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
5. Never open the product. Repairs or service should only be performed by qualified personnel.
6. Do not expose to heat, water, moisture, direct sunlight!
7. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
8. Only charge with supplied USB cable.
9. Do not use non original accessories together with the product as this can make the product functionality abnormal.

Product appearance

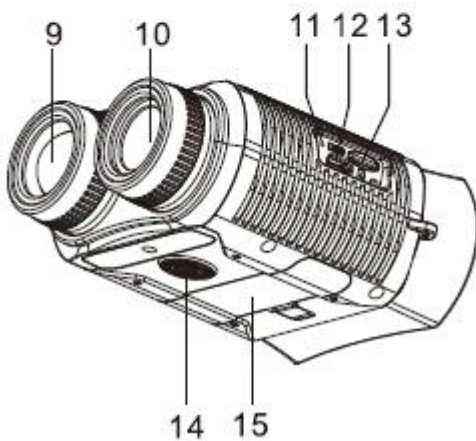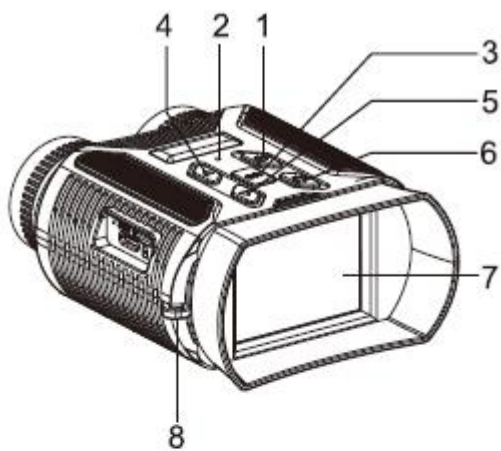


1. Power On/Off/Menu
2. Indicator light
3. OK/photo button
4. Scroll to top button
5. Scroll down button
6. On/Off button/Mode button
7. Display screen
8. Lanyard hole
9. Infrared light
10. Lens
11. Charging light
12. USB port
13. microSD card holder
14. Tripod connector
15. Battery compartment cover

Insert memory card

Please choose a Class 10 microSD card (supporting up to 32GB).

Be sure to insert the microSD card in the right direction (as shown below); do not insert the card forcibly. Before use, format the microSD card, which can enhance the battery life, shutter speed and card compatibility.

Lightly press the edge of the microSD card to remove.

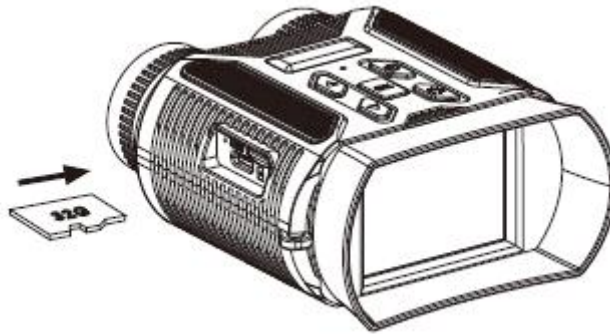



Basic operation

Power On/Off

Press and hold the power button for 3 seconds to switch the night vision device on/off.

Mode selection & Setup menu

There are 3 modes (photo mode, video mode and playback mode) and a setting menu for this night vision device.

Press and hold the mode button  to toggle between modes. Press the power button  to enter the setup menu.


Photo/Video

CAUTION

In photo and video modes, make adjustments to the night vision camera prior to taking photos and videos.

Focus wheel adjustment

Please look at the display and adjust the focus wheel manually to the left or right as per the actual viewing distance and until the display is clear (as shown below).

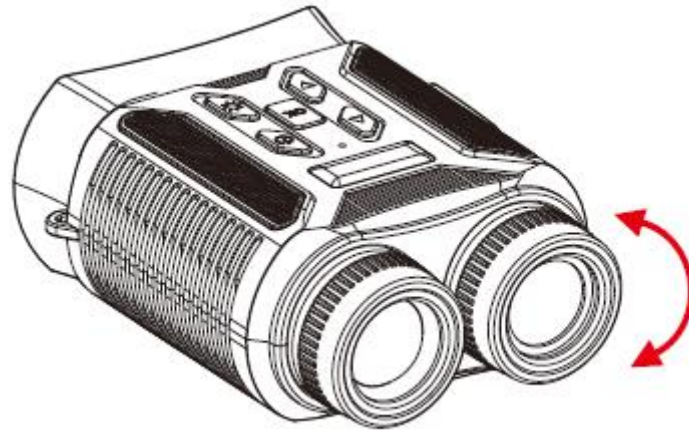


Enable infrared light night vision function


If there is not enough light or when using at night, press the infrared light IR button




to turn on the infrared light and cycle through the 7 infrared light levels (0>1 >2>3>4>5>6>7>0). The image changes to black and white. Depending on the actual situation, adjust the brightness. The dimmer the light, the higher the adjustment.

Operation

Scroll to top button  : Press and hold to enlarge the Image to a maximum of 8x.

Scroll down button  : Press and hold to zoom out the enlarged image.

OK button  : In photo mode, press to take a picture; in video mode, press to start recording, and then again press to end recording.

Icons



1X: Zoom magnification



IR:1: Infrared light level



Card not inserted



Battery capacity



Card inserted

8M:


Photo resolution

720P: Video resolution

04:57:00: Remaining available recording time


Playback mode

Enter playback mode


Press and hold the Mode button  to toggle between modes until playback mode is selected.

View photos and video recordings

Press the Scroll to top or Scroll down button  to preview the picture or video.

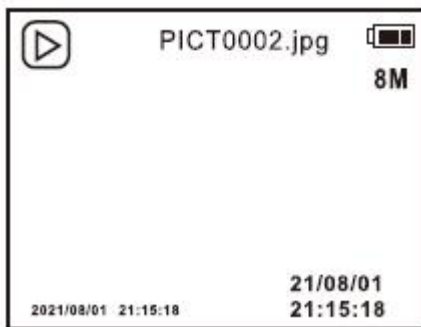

Photo

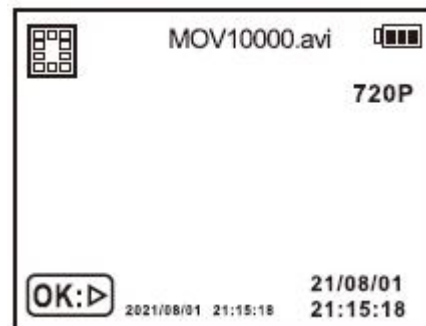


Video

Play/Stop video playback

Press the OK button  to stop video playback.




File deletion

Press the Scroll to top or Scroll down button  to select photo or video.

Press the Power /  button to pop up the file deletion page.

Press the up/down button  to select the Delete option.

Press the OK button  ; the Delete one and Delete all options are displayed.

Press the up/down button  to select, then press the OK button  to confirm the option; or press the Power  button to exit the Delete page.

Setup menu

Access the Setup Menu



In video and photo modes, press the Power  button to enter/exit the setup menu.

About the setup menu




Press the up/down button  to select the Setup menu options.

Press the OK button  to enter the options.

Press the up/down button  to select the parameter.


Press the OK button  to confirm and quit; or press the Power button  to return to the Setup menu.

Date/time setting

Locate the setting option in the menu. Press the OK button  to enter. Press the OK button  to toggle between year/month/day/hour/minute/second, then press the up/down button to enlarge or reduce the value. Press the Power button  to confirm and return to the settings menu.

PC connection

Enable the night vision device (the night vision device requires a memory card), use the data cable to connect to the computer to the night vision device. The following menu is displayed:

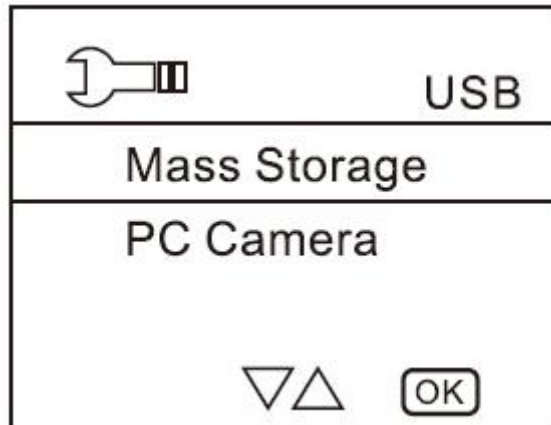

Press the Scroll up/down button  to select memory or camera, and press the OK button to confirm.

Mass storage: The computer recognizes the microSD card and enables you to copy files to the computer.

PC camera: The computer recognizes the camera as a computer-available camera.

CAUTION

Device power off

If the device fails to be switched on, check if the battery is installed properly; if the battery power is insufficient (please charge it promptly).

Reset operation

If the camera is stuck or does not react to operation, it can be forced off by long pressing the IR button and then lightly pressing the power button (double button press for quick reset) or by inserting the reset pin in the reset hole to turn off the camera and restart it afterwards.

Poor picture quality

If used during the day, be sure the IR light is off (if IR is on, the screen will display in black and white, if IR is off, the screen will display in color).

If used at night or in dim light, be sure the IR light is turned on.

Adjust the focus by moving the focus wheel gradually.

Maintenance

Remove the battery before cleaning the device. Use a dry cloth only to clean the exterior of the device. Do not use any cleaning solution to protect the device from possible damage. For cleaning the lenses, use a very soft, lint-free cloth (e.g. microfiber cloth). Avoid scratches on the lenses, just press the cleaning cloth carefully.

At all times, keep the device away from dust and moisture. Keep it in a protective case or in the box. Remove the batteries only if the device will not be used for a long period of time.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu

Warning!

- Lithium battery inside!
- Do not try to open the product!
- Do not expose to heat, water, moisture or direct sunlight!
- Only charge with the original charger supplied with this product!

Contact

Nordics

Headquarter

Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail

For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.

Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**

E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A

Ronda Augustes y Louis Lumiere, n° 23 - nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain

Phone: **+34 960 046 883**
Mail: **support.es@denver.eu**

Portugal:

Phone: **+35 1255 240 294**
E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service

Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail

support.de@denver.eu

Fairfixx GmbH

Repair and service
Rudolf-Diesel-Str. 3 TOR 2
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,
Smartphones & Tablets)

Tel.: **+49 851 379 369 69**

E-Mail: **denver@fairfixx.de**

Austria

Lurf Premium Service GmbH

Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**

E-Mail: **denver@lurfservice.at**

If your country is not listed above,
please write an email to
support@denver.eu



DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu



Version 1.1

