
For age 14+

# Denver DCW-362

#### denver.eu

www.facebook.com/denver.eu Please read this instruction manual carefully before using the product

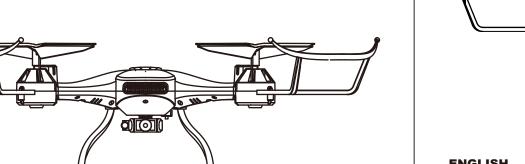


# **DCW-362** denver.eu

**Odenver** 

#### 06/02/2024



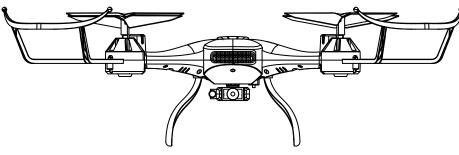

#### ENGLISH

#### Notice:

#### 1 Instructions

Please read the user handbook carefully and then keep it in a safe place for future consultation and maintenance.

#### 1.1 Important Notice

(1) This product is not a toy, it's a piece of complicated equipment which integrated with professional knowledge by mechanic, electric, air mechanics, high-frequency transmitter and so on, so it should be installed correctly and adjusted to avoid any accidents. The owner must always operate in a safe manner, if improper operation that caused human injured or property damage, then we DENVER A/S accept no liability for any safety duties from operation. As we have no control over the way they maintained, used and operated.


(2) This product is not suitable for users under 14 years of age.

(3) The use of the drone may be prohibited in some areas like train stations, airports, aircrafts, inhabited areas etc. You should check with the authorities whether the use of the drone is permitted in some public or private areas. Always use the drone bearing in mind not to breach people's privacy. We exclude liability for any wrong use of the drone.

(4) We DENVER accept no liability for any safety duties or fines arising from operation, usage or miscontrol after the sale of products. Warranty does not cover if drone crashes and get damaged. 1.2 Safety Precautions Keep away from crowd when flying, since drone flight is a high-risk hobby. Misassembled or broken main frame or defective electronic equipment or unskilled operation may cause accidents of machine damaged or injured. Please pay special attention to safety operation. (1) Keep away from people and obstacles "The flying speed and status of the drone is uncertain, so it may cause potential danger." When choosing a flying site should stay clear of buildings, trees and power lines. AVOID flying in or near crowded areas. Meanwhile avoid flying in rain, storms, thunder and lightening to protect machinery and parts out of damage. (2) Keep away from humid environments Inside of drone is made up of precise electronic components. Stay away from humidity or water vapor to protect machinery and parts. (3) Safety operation Please fly your drone according to your physical status and flight skill. Fatigue, listlessness and mis-operation will increase possibilities of accidental hazard. (4) Keep away from rotating blades Keep your face and body as well as all spectators away from the rotating blades. The spinning blades of a model of this type can cause serious injury. (5) We recommend flying the drone below 10 meters of height. (6) Keep away from heat A drone is made up of metal, fiber, plastic, electronic components, etc. Keep it away from heat and sunshine to avoid distortion, and damage. 1.3 Check List Before First Flight (1) Flying field should be in an open space and we suggest at least 5M length \*5M wide \*3M height. (2) Make sure the receiver and transmitter is fully charged (3) Please strictly obey the order of turn-on, turn-off before operation. When starting your flight, first turn on the transmitter, and connect the battery with drone last; When finishing your flight, please disconnect the battery from your drone first, turn off transmitter last. An upset in the order of connection may cause your drone loose control to threaten yourself and others safely. Please follow a correct habit of turn-on and turn-off. (4) Make sure the connection is solid between battery or motor. The ongoing vibration may cause bad connection of power terminal and make the drone uncontrollable.

## Battery Installation & Charging

Controller

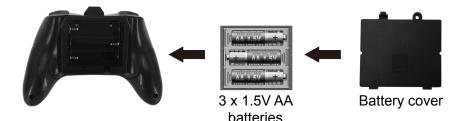

To install batteries: Open the cover of battery case, insert 3 x 1.5V AA batteries. according to indicated polarity (batteries not included).

Battery installation should be done under adult supervision only! Do not mix old and new batteries.

Do not mix different types of batteries.

## Charging

 
Connect one side of the USB connector with the battery, and the other side into any USB port of computer or a smartphone charger (not included).




#### Drone

Replacing the damaged blades:

Your set will come with 4 spare rotors, two type A (A1=A2) and two type B (B1=B2). You will see the "A" and "B" word on the canopy, then put the rotor on the motor accordingly




## Remote Control

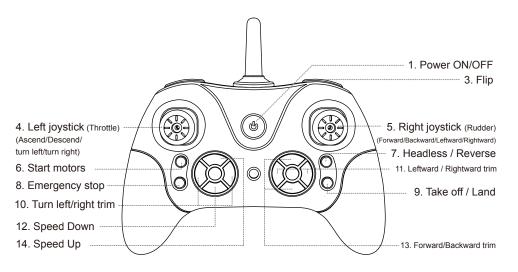

## Standard Operation Steps



 

1. Turn on the controller






I. Push the throttle up and down, a beep will sound: controller has connected with the drone

5 To start motors (3 methods) Press [Take-off], drone flvs a. Push the throttle to the top up and hovers at a fixed height Press [Land], drone lands on position and release it guickly. b. Press button 'Start motors' the ground and motors stop. (LED lights on the drone stops flashing) c. Pull the Throttle to the bottom Press [Emergency], all motors left corner and Rudder to bottom stop and drone fall down directly right corner at the same time.


ENG 4

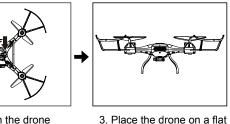

surface

 $\sim \Rightarrow \sim$ 

 2. Turn on the drone (LED lights on the drone flashes slowly)




### Calibration Reset (Very important!)

Before first flying, Calibration Reset is necessary to be done, to make sure the drone will fly stably: Pull the throttle and rudder to Bottom Right corner at the same time for 3 secs, the LED lights on () the drone flashes quickly, then let go the throttle and rudder. The LED lights on the drone stops flashing and keeps on. Calibration Reset complete.

#### Headless Mode Start / Quit Headless Mode

Press the button on controller (as picture) you will hear beep sounds, then you get into headless mode and lights flash on the drone. Press it again to guit.

At the moment when you start headless mode, the direction that controller is pointing to will be fixed as the directions of drone. No matter how you rotate the drone, the front direction won't change accordingly.

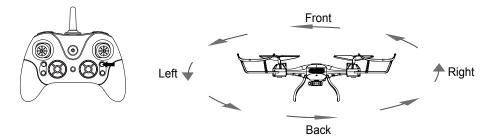

## **One Key Reverse**

Press and hold this button (as picture), and you will activate One Key Reverse and the drone will now attempt to fly back  $\frown \frown \frown \frown$ 

towards its starting direction.

If you want to deactivate this mode, then push the right joystick (Rudder) to any direction.

Note: The drone will not land automatically, you still need to control the height of the drone when using the one key reverse flying mode.

## WiFi Camera

#### 1. APP DOWNLOAD & INSTALLATION

1.1 Search [KY FPV] from iOS App Store or Android Google Play 1.2 Download and install it onto your smart phone or tablet


### 2. HOW TO CONNECT DRONE WITH APP

- 2.1 Power on the drone
- 2.2 Enter the Setting of your smart phone/tablet, and turn on WiFi
- 2.3 Find a WiFi hotspot [KY...], click to connect it until "connected".
- 2.4 Start the App [KY FPV], click the icon [START] to enter the control interface. Meanwhile, real time video from the camera can be enjoyed.
- 2.5 Now users can control the drone with with the icons in the App. For detailed control guide, please click the icon [?] to read carefully.

2.6 Photos and Video files will be stored onto smart phone/tablet automatically.





## Flips and rolls

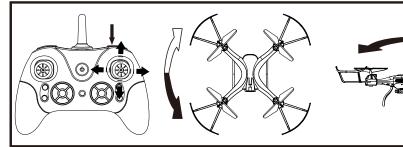

After you have the basics of flying, you're ready to learn flip and roll your drone. To perform a flip or roll, press the *Flip* button, make sure the drone is at least 3 meters of the ground and guickly push the Rudder, in either direction to make the drone flip or roll. Once the manoeuvre is completed, steady the drone.

#### Main Accessories

 

 



-

Blade

Camera

ENG 6



1000

Remote controller







Blade guards Landing feet USB Charge cable

Please notice - All products are subject to change without any notice We take reservations for errors and omissions in the manual. ALL RIGHTS RESERVED. COPYRIGHT DENVER A/S

**denver** 

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste materials discarded electric and electronic equipment and batteries) are not handled correctly.

Electric and electronic equipment and batteries are marked with the crossed out trash can symbol, as below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and patteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, DENVER A/S declares that the radio equipment type DENVER DCW-362 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: Please enter: **denver.eu** and then click the search ICON on topline of website. Write modelnumber: dcw-362. Now enter product page, and red directive is found under downloads/other downloads.

Operating Frequency Range: 2458 MHz - 2473 MHz Max Output Power: 18.5 W

Denver A/S reserve the rights for print errors

Warning! - Lithium battery inside ! - Do not try to open the device! - Do not expose to heat, water, moisture or direct sunlight! I

www.facebook.com/denver.eu

DENVER A/S

Denmark

Omega 5A, Soeften

DK-8382 Hinnerup

## Contact

Nordics

Headquarte Denver A/S Omega 5A, Soeften DK-8382 Hinnerup Denmark

Phone: +45 86 22 61 00 (Push "1" for support)

E-Mail For technical questions, please write to support.hq@denver.eu

For all other questions please write to: contact.hq@denver.eu

#### Benelux

\_\_\_\_\_

DENVER BENELUX B.V. Barwoutswaarder 13C+D 3449 HE Woerden The Netherlands

Phone: 0900-3437623

E-Mail: support.nl@denver.eu

Spain/Portugal

\_\_\_\_\_

DENVER SPAIN S.A Ronda Augustes y Louis Lumiere, n° 23 - nave 16 Parque Tecnológico 46980 PATERNA Valencia (Spain)

Spain Phone: +34 960 046 883 Mail: support.es@denver.eu

Portugal: Phone: +35 1255 240 294 E-Mail: denver.service@satfiel.com



DENVER A/S Omega 5A, Soeften DK-8382 Hinnerup Denmark



denver.eu facebook.com/denver.eu

ENG 7

Denver A/S cannot be held responsible for any technical or typographical errors and reserves

the right to make changes to the product and manuals without prior notice. If you detect any

inaccuracies or omissions, please inform us at the address on the back cover.

Germany

Denver Germany GmbH Service Max-Emanuel-Str. 4 94036 Passau

Phone: +49 851 379 369 40

E-Mail support.de@denver.eu

Fairfixx GmbH Repair and service Rudolf-Diesel-Str. 3 TOR 2 53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards, Smartphones & Tablets)

Tel.: +49 851 379 369 69 E-Mail: denver@fairfixx.de

#### Austria

\_\_\_\_\_

Lurf Premium Service GmbH Deutschstrasse 1 1230 Wien

Phone: +**43 1 904 3085** E-Mail: denver@lurfservice.at

If your country is not listed above please write an email to support@denver.eu