



PBW-5000 denver.eu

facebook.com/denver.eu 2024



INSTRUCTION MANUAL Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.


- This product is not a toy. Keep it out of the reach of children and pets to avoid chewing and swallowing.
- Warning: This product includes are chargeable Polymer Li-ion battery.
- Product operating and storage temperature is around 25 degrees Celsius. Environments under and above this temperature might affect functionality. Ensure that the unit is completely cool. Store in a cool, dry place.
- 4. Never open the product. Don't remove any fixed covers as this may expose you to dangerous voltages. Do not touch the inside electronics, or you may get an electric shock. Repair or service are only to be performed by qualified personnel.
- 5. Do not expose to heat, water, dust (dusty environment), moisture, direct sunlight!
- Never place naked flame or sources of heat on the beside of this products.
- 7. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop using it immediately.

- 8. Do not block the ventilation openings.
 The product needs them to disperse heat.
- Do not place the product in closed cupboards, shelving or areas without proper ventilation.
- 10. Only charge with the supplied USB cable. And ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the instructions
- Do not use non original accessories together with the product as this can make the product functionality abnormal.
- 12. Never leave the appliance unsupervised when it is in use
- 13. Unplug the cord from the mains if the appliance malfunctions during use.
- 14. Unplug the cord from the mains after use and before storing.
- 15. Unplug the cord from the mains when change any connections.
- There are no user serviceable parts in the product. When servicing, refer to qualified service personnel.

Denver A/s reserve the rights for print errors Denver A/s cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. If you detect any inaccuracies or omissions, please inform us at the address on the back cover.

PLEASE READ ALL INSTRUCTIONS CAREFULLYAND RETAIN FOR FUTURE USE

DESCRIPTION OF PARTS

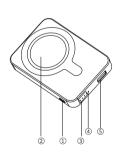



- ① On/Off Button
- Magnetic wireless charging area
- (3) LED indicator lights for battery power (4) LED indicator light for wireless charger
- (S) USB output
- Type C input and output
- (7) Stand

PBW-5000 Magnetic Wireless Charging Dowerhank

PACKAGE CONTENTS:

- Power bank *1
- Charging Cable *1
- Instruction Manual *1

TECHNICAL SPECIFICATIONS

- · Built-in rechargeable battery: 5000mAh Type-C input: 5V 2.4A
- Type-C output: 5V 2A
- USB output: 5V 2A
- · Wireless charger output: 5W
- · Compatible with iPhone 12/13/14/15 series for magnetic wireless charging · With battery indicator
- With foldable stand

INSTRUCTIONS FOR USE

Charging Your Powerbank

- 1.Before using it for the first time please fully charge the battery!
- Please use the Type C cable provided to charge your powerbank, connect the Type-C end to the powerbank, and connect the other end to your computer USB port or any other adaptor.
- 3.While it is Charging, the battery indicator will flash. The four indicators on the left are power indicators, which show the battery remaining capacity from left to right: 100%-75%-50%-25%.
- 4.When charging is completed, four LED indicator lights will stay on white, please remove the charge cable after fully charged.

Charging Your Phone or Other Devices

- 1.Ensure that your Powerbank is fully charged.
- 2.Use the Type C output port or USB output port on the powerbank to charge your phone or any other device. While charging your phone or other devices, the LED indicators for battery remaining capacity will flash.

Wireless Charging Your iPhone

- 1.Ensure that your Powerbank is fully charged.
- 2. Place your mobile phone in the centre of the wireless charging surface, and press the switch button to turn on the wireless charging function. Then the powerbank will charge your iPhone now.
- Check your mobile phone is successfully charging.
- 4. While the powerbank is charging your iPhone, the LED indicator will stay green.
- 5.If the wireless charging indicator light flashes then there is an issue with charging. Try re-positioning your phone or remove your phone case.

Note:

- 1.Ensure the protective case does not create distance between the charging pad and the back of the phone that is greater than 4mm.
- 2.Do not charge your phone in a metal case or any magnetically sensitive devices, such as metallic studs, magnetic clasps, or a magnetic plate, in this case please remove the case before placing your phone.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



Denver eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark
www.facebook.com/denver.eu

Contact

Main contact point: contact.hg@denver.eu

Nordics

Headquarter Denver A/S Omega 5A, Soeften DK-8382 Hinnerup Denmark

Phone: +45 86 22 61 00 (Push "1" for support)

E-Mail
For technical questions, please write to:
support.hg@denver.eu

For all other questions please write to:

Benelux

DENVER BENELUX B.V. Barwoutswaarder 13C+D 3449 HE Woerden The Netherlands

Phone: 0900-3437623

Spain/Portugal

DENVER SPAIN S.A Ronda Augustes y Louis Lumiere, n° 23 - nave

Parque Tecnológico 46980 PATERNA Valencia (Spain)

Spain Phone: +34 960 046 883 Mail: support.es@denver.eu

Portugal: Phone: +35 1255 240 294 E-Mail:denver.service@satfiel.com

Germany

Denver Germany GmbH Service Max-Emanuel-Str. 4

Phone: +49 851 379 369 40

E-Mail support.de@denver.eu

Fairfixx GmbH Repair and service Rudolf-Diesel-Str. 3 TOR 2 53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards, Smartphones & Tablets)

Phone: +49 851 379 369 69 E-Mail:denver@fairfixx.de

Austria

Lurf Premium Service GmbH Deutschstrasse 1

1230 Wien
Phone: +43 1 904 3085
E-Mail:denver@lurfservice.at

Poland

LetMeRepair Poland sp. z o.o.

ul. Częstochowska 140 62-800 Kalisz

Phone: 62 75 38 092 E-Mail:denver-service@letmerepair.pl

Godziny pracy: 8 - 18 (poniedziałek - piątek)

If your country is not listed above, please write an email to support@denver.eu



Denver A/S Omega 5A, Soeften DK-8382 Hinnerup Denmark

denver.eu facebook.com/denver.eu

