66.6mm

94.5mm

denver

ECQ-112B

denver.eu

2026

FR
Cet appareil et ses accessoires sont recyclables
À DÉPOSER EN MAGASIN ou À DÉPOSER EN DÉCHÈTERIE
Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of the reach of children.
2. Warning: This product includes are chargeable lithium ion battery.
3. Keep product out of the reach of children and pets to avoid chewing and swallowing.
4. Product operating and storage temperature is from 0 degrees Celsius to 40 degrees Celsius. Environments under and above this temperature might affect functionality.
5. Never open the product. Do not touch the inside electronics, or you may get an electric shock. Repair or service are only to be performed by qualified personnel.
6. Do not expose to heat, water, dust (dusty environment), moisture, direct sunlight!
7. Please protect your ears against loud volumes. Loud volumes can damage your ears and lead to hearing loss.
8. Bluetooth wireless technology can only operate within a range of about 10m (30ft). The maximum communication distance may vary depending on the presence of obstacles (people,metal objects, walls, etc.) or the electromagnetic environment.
9. Microwaves emitted by a Bluetooth device may affect the operation of electronic medical devices.
10. If water or foreign objects enter the unit, itmay result in fire or electric shock. If water or a foreign object enters the unit, stop using it.

Package Contents
Alarm Clock
USB-C Charging Cable
Instruction Manual

Overview

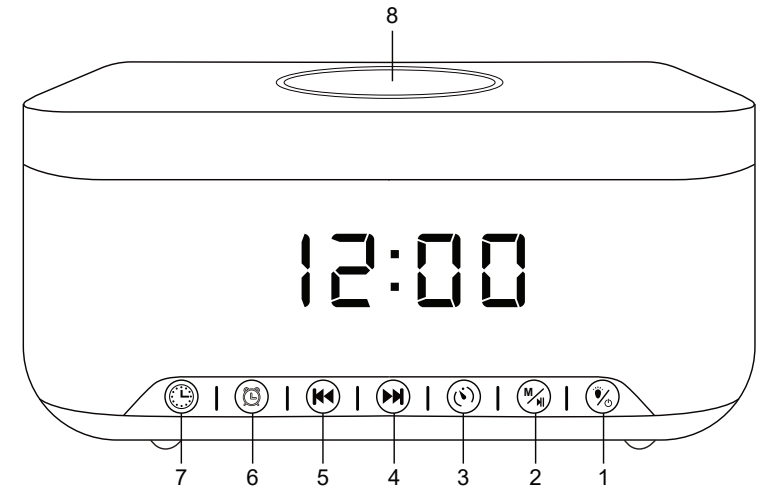

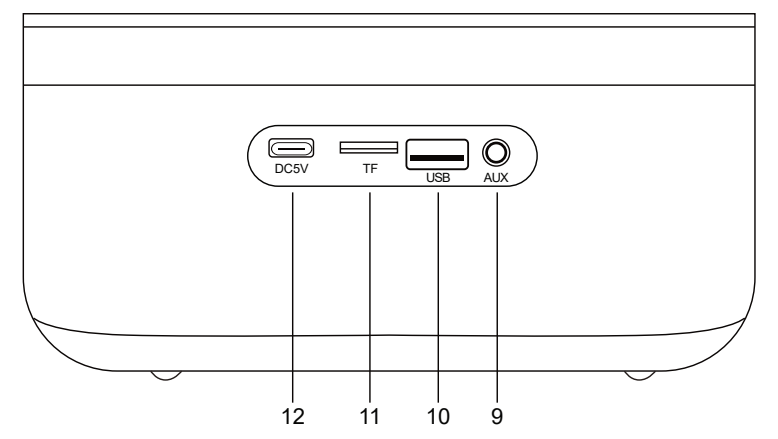

1. On/off button / LED changing button
2. Play/Pause button/Mode button (Bluetooth/ White Noise)
3. Timer (15min / 30min / 60min)
4. Press: to play next song
Press and hold: to increase volume
5. Press: to play previous song
Press and hold: to decreasing volume
6. Alarm clock
7. Time setting button
8. Wireless charger
9. AUX IN port
10. USB flash drive input
11. TF / SD card insert
12. USB charging port (Indicator inside)

Instructions - How to use the bluetooth mode
- Turn on the speaker by pressing the on/off button (1). The bluetooth mode will be on automatically and the bluetooth indicator on the display will flash
- Open the Bluetooth menu on your wireless device (phone, tablet,laptop, i.e.) and select " **ECQ-112**
- Pair the device and play music

Instructions - How to use the White noise mode
- Turn on the speaker by pressing the on/off button (1)
- Repeatedly long press the "M" button (2) to browse through the mode until you get the white noise mode
- briefly press the button (4) ⏭ and button (5) ⏮ to choose your favorite white noise

Instructions - How to use the Timer
While using it, press (3) to choose the time you want, 15 minutes, 30 minutes or 60 minutes.

Instructions (How to set time)
- Press the time setting button (7) to enter the time setting mode.
- Hour digit flashes, and it can be adjusted by pressing (4) ⏭ and button (5) ⏮
- Press and hold the button for moving numbers in a fast forward/backward way.
- Press (7) to confirm your selection. This will lead into Minute adjustment mode. Minute digit flashes, and it can be adjusted by pressing (4) ⏭ and (5) ⏮ . Press and hold the button for moving. numbers in fastforward/backward way.Press button(7) to confirm your selection, and complete time setting.

Instructions - How to set the Alarm
- Press the Alarm button (6) to enter the Alarm setting mode
- Hour digit flashes, and it can be adjusted by pressing the button (4) ⏭ and button (5) ⏮ Press and hold the button for moving numbers in a fastforward/backward way. Press the button (6) to confirm your selection.This will lead into Minute adjustment mode. Minute digit flashes, and it can be adjusted by pressing the button (4) ⏭ and button (5) ⏮.Press and hold the button for moving numbers in fastforward/backward way. Then press button (6) to enter Alarm ringtone mode, press the button (4) ⏭ and button (5) ⏮ to choose any ringtone you want out of 7.
- Press button (6) confirm your selection, and complete alarm.

Remark:
Press and hold the Alarm button(6) to turn the Alarm ON or OFF. The ALARM indicator will appear on the display when the alarm is turned on

Instructions - How to use the TF-card mode
- Turn on the alarm clock by pressing the on/off button (1)
- Insert the TF-card into the TF card slot (11)and the music will start playing automatically

Instructions - How to use the USB flash drive
- Turn on the speaker by pressing the on/off button (1)
- Insert the USB flash drive into the USB flash drive slot (10) and the music will start playing automatically

Instructions – How to use the AUX IN mode
- Turn on the speaker by pressing the on/off button (1)
- Insert one of the 3.5mm jack into the 3.5mm Aux in slot (9) and insert another one into your device.
- Play music

Instructions - How to use the wireless charger
- Plug the small connector (USB -C) of the included USB power cable into the
USB- C input port on the back of the alarm clock.
Plug the large connector (USB Type-A) into the 9V 2A USB Adapter (not included) and plug into a wall outlet to power the alarm clock firstly;
- Place your Qi compatible device on top of one of the wireless chargers, ensuring that it is centrally positioned.

Instructions - How to charge the alarm clock
- Insert the USB-C USB cable into the charging port (12)
- Insert the USB-A side into a USB charger or other power source
- During the charging process, a red indicator light will remain on, and the light will be off when fully charged.

Instructions (How to control the front light)
- Double press the power button (1) to control the front light brightness. You will get 100%-50%-25%-Off ←
- Repeat the above cycle as applicable.

Please notice - All products are subject to change without any notice.
We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S

denver

denver.eu

CE

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type ECQ-112B is in compliance with Directive 2014/53/EU. The full text of the RED declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: ECQ-112B. Now enter product page, and RED directive is found under downloads/other downloads.

Information on standby/off mode power consumption and power management for products compliant with Commission Regulation (EU) 2023/826 can be found at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: ECQ-112B and enter the page.

Max audio output power: 5W RMS
Bluetooth operating frequency range: 2402-2480Mhz
Max RF output power: 4 dBM

Warning!
-Lithium battery inside!

DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark
www.denver.eu
www.facebook.com/denver.eu

Contact

Main contact point: contact.hq@denver.eu

Nordics

Headquarter
Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1"for support)

E-Mail
For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900 -3437623**
E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A
Ronda Augustes y Louis Lumiere, nº 23– nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain
Phone: **+34 960 046 883**
Mail: **support.es@denver.eu**

Portugal:
Phone: **+35 1255240 294**
E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service
Service Center
Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379369 40**

E-Mail
support.de@denver.eu

Monday - Thursday 09:00 - 16:30
Friday 09:00 - 14:00

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230Wien

Phone: **+43 1 904 3085**
E-Mail: **denver@lurfservice.at**

Poland

LetMeRepair Poland sp. z o.o.

ul. Częstochowska 140
62-800 Kalisz

Phone: **62 75 38 092**
E-Mail: **denver-service@letmerepair.pl**

Godziny pracy: 8 – 18(poniedziałek – piątek)

If your country is not listed above, please write an email to contact.hq@denver.eu

Product & compliance info

denver
Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

22
PAP