# EC-54

www.facebook.com/denver.eu

10/2025

FR

TOUS LES EMBALLAGES
+NOTICE

BAC DE TRI

# Safety information

1. Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.
2. This product is not a toy. Keep it out of reach of children.
3. Keep product out of the reach of children and pets to avoid chewing and swallowing.
4. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius.
5. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
6. Do not expose to heat, water, moisture, direct sunlight!
7. Please protect your ears against loud volume. Loud volume can damage your ears and risk in hearing loss.
8. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
9. Only charge with supplied USB cable.
10. Do not use non original accessories together with the product as this can make the product functionality abnormal.

## 1.Functions Description

### a) Keys Function

Ⓜ Mode Adjustment

Volume-/Time Setting decrease/Previous Song

Turn ON/OFF,Play/Pause Music,Handsfree Calling

Volume+/Time Setting increase/Next Song

Set or Cancel the Alarm

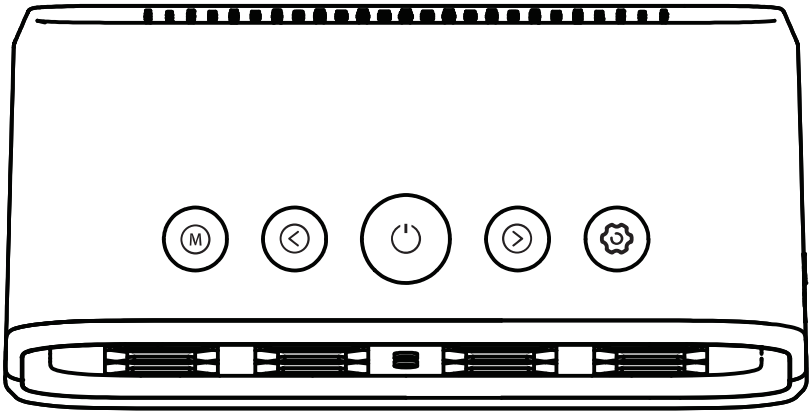

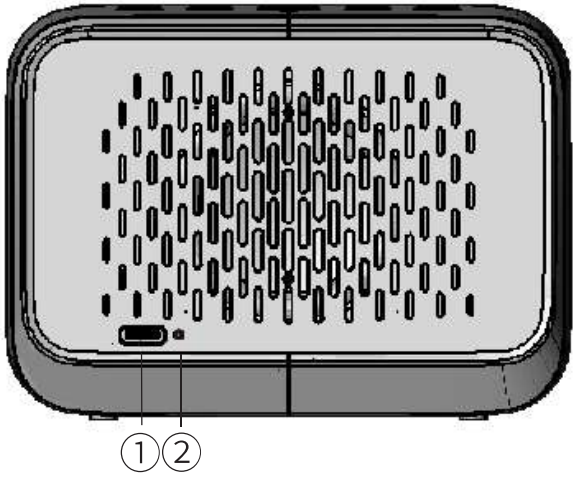


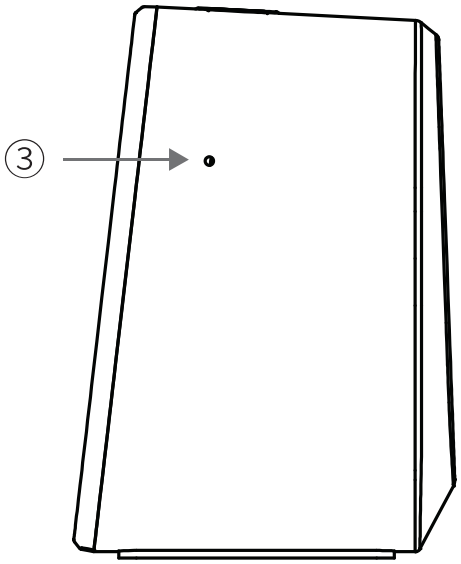


### b) Functional Ports

① Power port

② Power indicator

TIP:Red light on when working

③ MIC: microphone

c) LED Display Area

④ Time Display Area
⑤ Morning
⑥ Afternoon
⑦ BT Mode Indicator: Bluetooth working
⑧ Alarm 1 Indicator
⑨ Alarm 2 Indicator

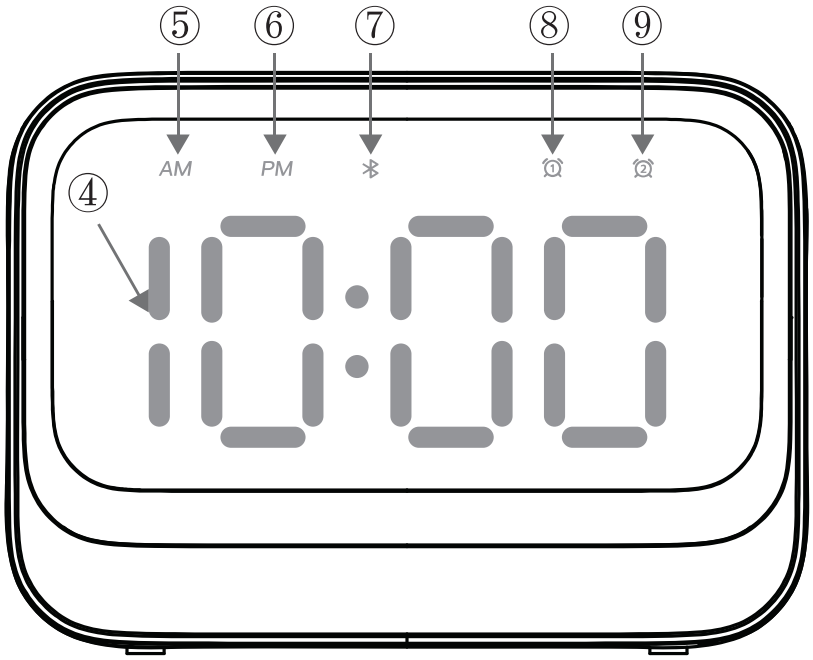


## 2.Device Operation

### 2.1 How to turn on/off the device?

Press ⏻ key for 2 seconds to turn on, press ⏻ key for 3 seconds to turn off.

### 2.2 How to set the time?

Connect the device to your cell phone with Bluetooth,the device will automatically synchronize your cell phone time and day,no need to set it separately.

※(Some phones will prompt for permission authorization, allowing authorization to achieve synchronization)

## 2.3 How to connect the power?

Connect the USB-A end of the cable to the power adapter and the Type-C end to the product, then the product can operate normally.

Warning!

Please use a power adapter that has been certified for safety and produced by a legitimate manufacturer.

Do not use the power adapter in flammable materials or in humid or high-temperature environments.

## 2.4 How to set alarm 1, alarm 2 and manually?

The setup steps for the other modes are the same as for alarm 1 mode.

**2.5 When the alarm is ringing, what button turns it off?**

Each alarm with snooze function, get 5 minutes extra sleeptime per snooze, up to 3 snooze. When the alarm rings for the first time,press any key once to enter the snooze function, If you need to stop the alarm, please press key 2 times to stop the alarm.

**2.6 How to cancel the alarm that has been set?**

Press the key to switch alarm mode:Short press to switch 4 clock modes: / / & /no alarm Select no alarm mode( and indicators are off).

**2.7 Is it possible to change the alarm ringtone to another song and can the volume of the alarm be adjusted?**

Bluetooth speaker and alarm clock are 2 separate systems,the volume control key can only control the volume of the Bluetooth speaker, the ringtone and volume of the alarm CANNOT be changed,the volume reaches 100-105 decibels,the device is a loud alarm clock for heavy sleepers

**2.8 How to connect to cell phone Bluetooth?**

Turn On the Clock, it will be automatically to mode, when the device indicator is ON, find“Denver EC-54”in your phone Bluetooth,connect to Denver EC-54.

**2.9 How to adjust the speaker volume,switch songs and pause play?**

Short press key to adjust the speaker volume,Long press key to switch songs, press key to pause/play.

## 2.10 How to set the Time Display Brightness ?

It will be brightest after power on, and will dim after 15 seconds of inactivity.

## Specifications

Model:EC-54
Bluetooth Version:Bluetooth 5.3
Working Distance:10M(barrier free)
Output:3W
Operating Frequency: 2402-2480MHz
Power input:DC 5V1A

| | |
|---|---|
| Manufacturer name | Huizhou Guoao Tong Technology Co., Ltd. |
| Business Registration no. | 91440300MA5F6U0T1N |
| Address | 4,5F (Plant B) No. 2 Runze Road, South High-tech Industrial Park, Huiao Avenue, Huizhou, Guangdong,China |
| Model identifier | GA-0501000V |
| Input voltage | 100-240V |
| Input AC frequency | 50/60Hz |
| Output voltage | 5V |
| Output current | 1A |
| Output power | 5W |
| Average active efficiency | ≥73% |
| Efficiency at low load (10%) | ≥63% |
| No-load power consumption | 0.1W |

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S

denver.eu

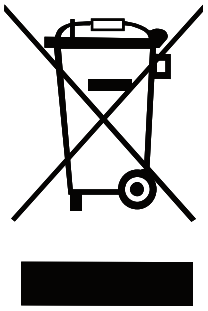

Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type EC-54 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: EC-54. Now enter product page, and RED directive is found under downloads/other downloads.
Operating Frequency: 2402-2480MHz
Max Output Power:3W

DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark
www.facebook.com/denver.eu

# Contact

## Main contact point: contact.hq@denver.eu

### Nordics

**Headquarter**
Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail
For technical questions, please write to:
**support.hq@denver.eu**

For all other questions please write to:
**contact.hq@denver.eu**

---

### Benelux

**DENVER BENELUX B.V.**
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**
E-Mail: **support.nl@denver.eu**

---

### Spain/Portugal

**DENVER SPAIN S.A**
Ronda Augustes y Louis Lumiere, nº 23 – nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

**Spain**
Phone: **+34 960 046 883**
Mail: **support.es@denver.eu**

**Portugal:**
Phone: **+35 1255 240 294**
E-Mail: **denver.service@satfiel.com**

### Germany

**Denver Germany GmbH Service**
Service Center
Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail
**support.de@denver.eu**

Monday - Thursday 09:00 - 16:30
Friday 09:00 - 14:00

---

### Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**
E-Mail: **denver@lurfservice.at**

---

### Poland

**LetMeRepair Poland sp. z o.o.**

ul. Częstochowska 140
62-800 Kalisz

Phone: **62 75 38 092**
E-Mail: **denver-service@letmerepair.pl**

Godziny pracy: 8 – 18 (poniedziałek – piątek)

---

If your country is not listed above,
please write an email to
contact.hq@denver.eu

Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

22
PAP